

State of California
The Natural Resources Agency
Department of Water Resources
Division of Statewide Integrated Water Management
Water Use and Efficiency Branch

DRAFT

A Proposed Methodology for Quantifying the Efficiency of Agricultural Water Use

**A report to the Legislature pursuant to
Section 10608.64 of the California Water Code**



April 13, 2012

Edmund G. Brown Jr.
Governor
State of California

John Laird
Secretary for Natural Resources
The Natural Resources Agency

Mark W. Cowin
Director
Department of Water Resources

Copies of this report are available from:

State of California
Department of Water Resources
P. O. Box 942836
Sacramento, CA 94236-0001

This report is also available on the Water Use and Efficiency web site at:
<http://www.water.ca.gov/wateruseefficiency/sb7/committees/ag/a1>

State of California
Edmund G. Brown Jr., Governor

California Natural Resources Agency
John Laird, Secretary for Natural Resources

Department of Water Resources
Mark W. Cowin, Director

Susan Sims
Chief Deputy Director

Waiman Yip
Policy Advisor

Cathy Crothers
Chief Counsel

Sandy Cooney
Asst. Director Public Affairs

Kimberley Johnston-Dodds
Government and Community Liaison

Kasey Schimke
Asst. Director Legis. Affairs

Dale Hoffman-Floerke
Deputy Director
Delta/Statewide Water Management

Kathie Kishaba
Deputy Director
Business Operations

John Pacheco
Acting Deputy Director
California Energy Resources Scheduling

Carl Torgersen
Acting Deputy Director
State Water Project

Gary Bardini
Deputy Director
Integrated Water Management

Jennifer Marr
Assistant to the Deputy Director

John Andrew
Assistant Deputy Director
Climate Change

This report was prepared under the direction of
Division of Statewide Integrated Water Management
Kamyar Guivetchi, Chief

By

Water Use and Efficiency Branch
Manucher Alemi, Chief

Assisted by

Kent Frame Program Manager II
Fethi Benjemaa Senior Land and Water Use Scientist
Bekele Temesgen Senior Land and Water Use Scientist
Morteza Orang Senior Land and Water Use Scientist
Martin Berbach Staff Environmental Scientist
Spencer Kenner Staff Counsel
Andria Avila Office Technician

and

Lorraine Marsh Economist, DWR
Jim Rich Economist, DWR

In consultation with members of the

California Agricultural Water Management Council

and

Agricultural Stakeholder Committee

Editorial review, graphics, and report production

Under direction of Supervisor of Technical Publications Patricia Cornelius, research writers:

Mike Durant
Carole Rains

Frank Keeley
Sarah Sol

Charlie Olivares
Marilee Talley

Acknowledgments

This report was developed with the assistance of the following consultants:

- Stephen Hatchett, Senior Economist, CH2M Hill
- Greg Young, Tully & Young Comprehensive Water Planning
- Lucas Bair, Resource Economist, CH2M Hill
- Dave Ceppos, Center for Collaborative Policy, California State University, Sacramento, who has facilitated stakeholder and public meetings.

The Agricultural Stakeholder Committee (ASC) and its A1 Technical Subcommittee provided significant guidance in developing the Methodology for Quantifying the Efficiency of Agricultural Water Use. The Department of Water Resources thanks the members of the ASC and other subject matter experts who have participated in the ASC Subcommittee for their time and input:

Lewis Bair Reclamation District 108	Mike Grundvig California Agricultural Irrigation Association	Doug Obegi Natural Resources Defense Council
Thad Bettner Glenn-Colusa Irrigation District	Kevin Johansen Provost & Pritchard Consulting Group	Edward Osann Natural Resources Defense Council
David Bolland Association of California Water Agencies	Chris Kapheim Alta Irrigation District	Roger Reynolds Summers Engineering, Inc.
Charles Burt Cal Poly State University	Brian Lennon Irrrometer, Inc.	Steve Robbins Coachella Valley Water District
Peter Canessa Center for Irrigation Technology – CSU Fresno	Debra Liebersbach Turlock Irrigation District	Larry Rodriguez Kern County Water Agency
Juliet Christian-Smith Pacific Institute	Angela Anderson U.S. Bureau of Reclamation – Mid Pacific Region	Lawrence Schwankl UC Davis – Kearney Research
David Cone Kings River Conservation District	Paul Lum Solano Irrigation District	Robert Siegfried Santa Clara Valley Water District
Grant Davids Davids Engineering Inc.	Brad Mattson Richvale Irrigation District	Marc Van Camp MBK Engineers
Dave Davis California Agricultural Irrigation Association	Daniel Merkley California Farm Bureau Federation	Mike Wade California Agricultural Water Management Council
Anisa Divine Imperial Irrigation District	Jim Metropulos Sierra Club California	Walt Ward Modesto Irrigation District
Erin Field-Huston The Irrigation Association		

The following also participated in the A1 Subcommittee Meetings:

Baruch BenAmi
Netafim USA

Casey Cady
California Department of
Food and Agriculture

John Davids
Oakdale Irrigation District

Hicham Eltal
Merced Irrigation District

Aaron Fukuda
Tulare Irrigation District

Bruce Gwynne
California Department of
Conservation

Dan Johnson
USDA

Gary Kienlen
MBK Engineers

Tim O'Halloran
Yolo County Flood
Water Conservation District

Todd Manley
Northern California Water
Association

Anjanette Shadley Martin
Western Canal Water District

Todd Rinkenberger
Netafim USA

Spreck Rosekrans
Environmental Defense Fund

Blake Sanden
UC Davis Cooperative Extension

Mario Santoyo
Friant Water Authority

Brandon Souza
California Agricultural Water
Management Council

Stacey Sullivan
Sustainable Conservation

David Zoldoske
California Water Institute

Table of Contents

Acknowledgments	v
List of Acronyms.....	x
Executive Summary.....	ES-1
Methodology for Quantifying the Efficiency of Agricultural Water Use	ES-1
Plan of Implementation	ES-2
Supplemental Indicators.....	ES-7
Indicators of Irrigation System Performance.....	ES-7
Indicators of Crop Productivity	ES-7
1 Introduction	1
1.1 Purpose and Use of a Methodology	1
1.2 Legislative Direction and Declarations from Senate Bill X7-7 (Statutes of 2009)..	1
1.3 Process	3
1.4 Report Organization	4
2 Water Use and Water Use Efficiency in Agriculture	5
2.1 Water Use in Agriculture	5
2.2 Understanding Water Use Efficiency.....	7
3 Methodology for Quantifying the Efficiency of Agricultural Water Use.....	11
3.1 Spatial Scales Considered	11
3.1.1 Water Supplier Scale or Basin Alliance Scale	12
3.1.2 Field Scale	14
3.2 Water Use Efficiency Quantification Methods	15
4 Plan of Implementation.....	22
4.1 Approach and Roles	22
4.2 Water Use Efficiency Quantification Methods	23
4.2.1 Water Supplier or Basin Alliance Scales.....	23
4.2.2 Field Scale	29
4.4 Reporting the Quantification of Efficiency of Agricultural Water Use.....	33
4.5 Data Management.....	34
4.6 Estimated Implementation Costs.....	34
4.6.1 General Data and Improvement Costs	34
4.6.2 Water Supplier Scale Costs	35
4.6.3 Field Scale Costs.....	36
5 Supplemental Indicators	39
5.1 Irrigation System Performance Indicators	40
5.2 Crop Productivity Indicators.....	42
References.....	46

Appendix A. Selected Sections of California Water Code	A-1
Appendix B. Maps	B-1
Appendix C. Calculation Examples of Water Use Efficiency Quantification Methods and Indicators	C-1
C.1 Calculation Examples of Quantifying the Efficiency of Agricultural Water Use and Irrigation System Performance Indicators	C-1
C.1.1 Water Supplier Scale Calculation Example 1	C-1
C.1.2 Water Supplier Scale Calculation Example 2	C-5
C.1.3 Field Scale	C-6
C.2 Calculation Examples of Productivity Indicators	C-8
Appendix D. Parameter Descriptions and Calculations	D-1
D.1 Models for Calculation Applied Water, ETAW, and Effective Precipitation	D-2
D.2 Estimates of Effective Rainfall (Precipitation) and ETAW Using CUP+	D-3
Appendix E. Metrics Considered but Not Included in Proposed Methodology	E-1
Appendix F. Glossary	F-1

Tables

Table ES-1 Proposed implementing entities	3
Table ES-2 Summary of proposed methods for quantifying the efficiency of agricultural water use organized by spatial scale ⁽¹⁾	4
Table 2-1 Consumptive (irrecoverable) and non-consumptive (recoverable) uses of water	7
Table 3-1 Agricultural water suppliers known to DWR (2011)	12
Table 3-2 Empirical and modeled components of the water use efficiency quantification methods	21
Table 4-1 Water supplier data needed, data sources, and options for quantifying the efficiency of agricultural water use	25
Table 4-2 Field scale list of data needed, data sources, and options for quantifying the efficiency of agricultural water use	30
Table 4-3 Data elements, schedule, and responsible entity reports	33
Table 4-4 Estimated cost of implementing the proposed methodology	37
Table 5-1 Proposed implementing entities: Summary of supplemental indicators of irrigation system performance and crop productivity organized by spatial scale	39
Table 5-2 Empirical and modeled components of indicators	45
Table C-1 Water supplier scale water use efficiency quantification methods and Indicators, example 1	C-2
Table C-2 Water supplier scale water use efficiency quantification methods and Indicators, example 2	C-5
Table C-3 Field scale example of water use efficiency quantification methods and Irrigation System performance Indicator	C-6
Table C-4 Example of the productivity indicator calculated for Fresno County scale	C-8
Table D-1 Crop Tolerance and Yield Potential of Selected Crops as Influenced by Irrigation Water Salinity (EC_w) or Soil Salinity (EC_e) ¹	D-5

Figures

Figure 3-1 Schematic diagram of water supplier scale water balance	11
Figure B-1 DWR hydrologic regions including county boundaries.....	B-1
Figure B-2 DWR detailed analysis units for the Colorado River Hydrologic Region and respective counties	B-2

Boxes

Box 2-1 Farming, Water, and California's Economy.....	6
Box 2-2 California Agricultural Water Stewardship - A Systems Approach	9
Box 4-1 A Brief Description of Reporting Requirements under the Statutes	27
Box 5-1 Economic Efficiency	43

List of Acronyms

AU	agronomic use
ASC	Agricultural Stakeholders Committee
AW	applied water
AWc	applied water- county scale
AWf	applied water – field scale
AWMP	Agricultural Water Management Plan
AWb	applied water – basin scale
AWs	applied water – supplier scale
AWUF	agronomic water use fraction
CARCD	California Association of Resource Conservation Districts
CCUF	crop consumptive use fraction
CIMIS	California Irrigation Management Information System
CUP+	Consumptive Use Program+
CWC	California Water Code
CWP	California Water Plan (update)
CY	crop yield
DAU	detailed analysis unit
DF	delivery fraction
DU	distribution uniformity
DWR	California Department of Water Resources
ET	evapotranspiration
Etc	crop evapotranspiration
ETo	reference evapotranspiration
EU	environmental use
ETAW	Evapotranspiration of Applied Water
EWMP(s)	Efficient Water Management Practice(s)
FGD	farm gate deliveries
GCR	gross crop revenue
GW	groundwater
Kc	crop coefficient
PAW	Productivity of Applied Water
Pe	effective precipitation
RF	recoverable flow
SB X7-7	Senate Bill X 7-7
SW	surface water
SWRCB	State Water Resources Control Board
TWS	total water supply
TWUF	total water use fraction
USBR	US Bureau of Reclamation
USDA-NRCS	US Department of Agriculture, Natural Resources Conservation Service
VAW	Value of Applied Water
WS	water supplies
WMF	water management fraction

Executive Summary

The Water Conservation Act of 2009 (Senate Bill X7-7) directs the Department of Water Resources (DWR)—in consultation with the California Agricultural Water Management Council, academic experts, and other stakeholders—to develop and report to the Legislature a proposed methodology for quantifying the efficiency of agricultural water use and a plan of implementation that includes estimated implementation costs, roles and responsibilities and types of data that would be needed to support the methodology. The legislation does not authorize DWR to implement the methodology. However, DWR recommends that if the proposed methodology is authorized for implementation, the Legislature should appropriate the necessary funding to cover its implementation costs as described in this report.

To accomplish this and other provisions of SB X7-7, DWR convened an Agricultural Stakeholder Committee (ASC) consisting of agricultural water suppliers, academic experts, and environmental stakeholders to inform this work. DWR held numerous public listening sessions, stakeholder committee and subcommittee meetings, and public workshops to develop the methodology and prepare this report. During the process, numerous approaches and metrics were considered; and those that were not included in the proposed methodology are listed in Appendix E.

The proposed methodology is suitable to evaluate current conditions and strategies for improving agricultural water management on the diverse array of agricultural irrigation systems and operations found throughout California. The anticipated users of these methods are farmers, water suppliers, and basin water management groups, as well as nongovernmental organizations and local, State, federal, and tribal water planners. The methodology, however, is not intended for non-irrigated agriculture such as dairy production areas, on-farm processing, or other agricultural operations not directly related to irrigated lands.

Methodology for Quantifying the Efficiency of Agricultural Water Use

The methodology proposed in this report is composed of four consistent and practical methods for quantifying the efficiency of water use by irrigated agriculture. To develop the methods, DWR considered the components of a water balance at three spatial scales—basin, water supplier, and field—to understand and estimate through measurements or calculations how much water enters and leaves these areas. As a result, DWR proposes the following four methods for quantifying the efficiency of agricultural water use to help identify opportunities to improve the efficiency of water use at different spatial scales. The purpose, application, and implementation of these methods are summarized in Table ES-1 and Table ES-2 and described in Sections 3 and 4 of this report.

The Agricultural Stakeholder Committee was formed to advise DWR on implementation of the agricultural water conservation and planning provisions of SB X7-7

The proposed methodology is suitable to evaluate current conditions and strategies for improving agricultural water management on the diverse array of agricultural irrigation systems and operations found throughout California

The methodology is composed of four methods for quantifying the efficiency of water use by irrigated agriculture

- **Crop Consumptive Use Fraction (CCUF).** This method evaluates the relationship (ratio) between the consumptive use of crop(s) and the quantity of water applied. CCUF is a fraction that shows the proportion of applied water that is consumed by the crop. It is applicable at the basin, water supplier, and field scales.
- **Agronomic Water Use Fraction (AWUF).** This method calculates the ratio of agronomic use (salinity management, germination, etc.) and consumptive uses of crop(s) to the quantity of water applied. AWUF is a fraction that shows the portion of applied water used to grow the crop including crop consumptive use and agronomical use. It is applicable at the basin, water supplier, and field scales.
- **Total Water Use Fraction (TWUF).** This method further expands on the CCUF and AWUF by evaluating the relationship (ratio) between water applied for crop consumptive use, crop agronomic use and for environmental objectives, and the quantity of applied water. TWUF accounts for all intended water uses; as a result, this fraction can be used as a measure of total water use efficiency. It is applicable at the basin, water supplier, and field scales.
- **Water Management Fraction (WMF).** This method evaluates the relationship between crop consumption use and recoverable flows and quantity of applied water. This method estimates the recoverable water available for reuse at another place or time in the system. It is applicable at the basin and water supplier scales and is not intended for field scale.

Acronyms of four methods, each of which evaluates a portion (fraction) of applied water:

- CCUF – Crop consumptive use fraction
- AWUF – agronomic water use fraction
- TWUF – total water use fraction
- WMF – water management fraction

The above methods are fractions (ratios) that quantify the efficiency of agricultural water use by showing the portion of the applied water that was used for various intended uses—crop consumptive use, agronomic practices, and environmental water. All of these fractions have values between 0 and 1. The greater the portion of applied water going to the intended uses, the larger the fraction, hence the higher the water use efficiency.

Plan of Implementation

The plan of implementation for the methodology presented in this report includes an approach, roles, implementing entities, data needs and sources, reporting, schedule/phasing, data management, and cost estimates that would be needed to implement the methodology (methods) proposed in this report for quantifying the efficiency of agricultural water use. The proposed implementation entities are shown in Table ES-1 and summary of implementation plan is shown in Table ES-2.

It is proposed that the methodology be implemented using a phased approach

DWR recommends that if the proposed methodology is implemented, it be carried out using existing programs to the extent possible, and by expanding

them, creating new programs, and/or reviving past programs as needed to avoid redundancy and reduce implementation costs. Existing legislation (CWC section 10608.48(d) and (h)) would provide a process for agricultural water suppliers to submit to DWR the results of quantification of efficiency of water use in their Agricultural Water Management Plans (AWMP). Agricultural water suppliers subject to CWC section 10826 (water suppliers greater than or equal to 25,000 acres and water suppliers less than 25,000 and more than 10,000 acres, if funding is available) would include in their AWMPs the results for the supplier basin scale methods (CCUF, AWUF, TWUF, and WMF), as well as the mean and standard deviation of the field scale values for CCUF, AWUF, and TWUF compiled from their service areas.

Table ES-1 Proposed implementing entities

Water Use Efficiency Quantification Methods	Proposed implementing entities		
	Basin-alliance	Supplier	Voluntary irrigation system evaluation*
Crop consumptive use fraction (CCUF)	√	√	√
Agronomic water use fraction (AWUF)	√	√	√
Total water use fraction (TWUF)	√	√	√
Water management fraction (WMF)	√	√	√

*CWC Section 10608.48(c) requires that water suppliers equal or greater than 25,000 acres provide on-farm irrigation system evaluations for their customers. Although CWC does not define on-farm irrigation evaluation, the application of the three methods would evaluate irrigation systems.

Table ES-2 Summary of proposed methods for quantifying the efficiency of agricultural water use organized by spatial scale ⁽¹⁾

Method for quantifying efficiency of agricultural water use ⁽²⁾	Implementing entity	Implementation schedule	Data needed	Estimated costs	Data reports
Basin scale ⁽³⁾					
Crop consumptive use fraction (CCUF) <i>Method evaluates the relationship between the consumptive use of a crop and the quantity of water applied.</i> $CCUF = ETAW/(AWb)$	Basin-Alliance	Phase 1: first AWMP cycle after legislative authority is established Phase 2: second AWMP cycle after legislative authority is established Phase 3: third AWMP cycle after legislative authority is established	Regional values of ET, AU, EU, Kc, AW, Pe, WS and RF	Not estimated*	Supplier scale values of ET, Pe, ETAW, Kc, AW, AU, EU, RF, CCUF, AWUF, TWUF, WMF, mean and standard deviation of field scale CCUF, AWUF, TWUF to be reported in AWMPs
Agronomic water use fraction (AWUF) <i>Method evaluates the relationship between the consumptive use plus the agronomic use of a crop and the quantity of water applied.</i> $AWUF = [ETAW+AU]/(AWb)$					
Total water use fraction (TWUF) <i>Method expands on the CCUF by including water for crop agronomic use and to meet environmental objectives.</i> $TWUF = (ETAW+AU+EU)/AWb$					
Water management fraction (WMF) <i>Method estimates the recoverable water available for reuse at another place or time in the system.</i> $WMF = (ETAW+ RF)/AWb$					

Footnotes: See bottom of final section of this table.

Acronyms: See also definitions in section 3. AU: agronomic use; AWb, AWs, AWf: Basin, supplier, and field scale applied water (AW consists of surface and groundwater delivered to a boundary excluding non-agricultural uses and storage); CCUF: crop consumptive use fraction; AWUF: agronomic water use fraction, EU: environmental use; ETAW: Evapotranspiration of Applied Water; RF: recoverable flow; TWUF: total water use fraction; WMF: water management fraction; Pe – effective precipitation.

*Basin scale costs are not estimated, as basin scale is an option and costs depend on the size and number of water suppliers forming a basin alliance.

Table ES-2 (cont'd.) Summary of proposed methods for quantifying the efficiency of agricultural water use organized by spatial scale⁽¹⁾

Supplier Scale ⁽⁴⁾					
Crop consumptive use fraction (CCUF) $CCUF = ETAW/(AWs)$ Agronomic water use fraction (AWUF) $AWUF = [ETAW+AU]/(AWs)$ Total water use fraction (TWUF) $TWUF = (ETAW+AU+EU)/AWs$ Water management fraction (WMF) $WMF = (ETAW+ RF)/AWs$	Water Suppliers ≥25,000 acres	Phase 1: first AWMP cycle after legislative authority is established Phase 2: second AWMP cycle after legislative authority is established	Supplier scale values of ET, Pe, ETAW, Kc, AW, AU, EU, RF, WS, FGD (See section 4.2.2.1)	\$1-5 per acre per year	Supplier scale values of ET, Pe, ETAW, Kc, AW, AU, EU, RF, FGD, CCUF, AWUF, TWUF, WMF, mean and standard deviation of field scale CCUF, AWUF, TWUF to be reported in AWMPs
Crop consumptive use fraction (CCUF) $CCUF = ETAW/(AWs)$ Agronomic water use fraction (AWUF) $AWUF = [ETAW+AU]/(AWs)$ Total water use fraction (TWUF) $TWUF = (ETAW+AU+EU)/AWs$ Water management fraction (WMF) $WMF = (ETAW+ RF)/AWs$	Water Suppliers <25,000 acres, DWR, pending funding	Phase 3: third AWMP cycle after legislative authority is established		Cost: \$24 per acre initial costs and \$10-13 per acre per year O&M and data management	

Footnotes: See bottom of final section of this table.

Acronyms: See also definitions in section 3. AU: agronomic use ; AW_r, AW_s, AW_f: Basin, supplier, and field scale applied water (AW consists of surface and groundwater delivered to a boundary excluding non-agricultural uses and storage); CCUF: crop consumptive use fraction; AWUF: Agronomic water use fraction, EU: environmental Use ; ETAW: Evapotranspiration of Applied Water; RF: recoverable flow; TWUF: total water use fraction; WMF: water management fraction; Pe – effective precipitation.

Table ES-2 (cont'd.) Summary of proposed methods for quantifying the efficiency of agricultural water use organized by spatial scale(1)

Field Scale⁽⁵⁾					
Crop consumptive use fraction (CCUF) $CCUF = ETAW/(AWf)$ Agronomic water use fraction (AWUF) $AWUF = [ETAW+AU]/(AWf)$ Total water use fraction (TWUF) $TWUF = (ETAW+AU+EU)/AWf$	Water Suppliers ≥25,000 acres	Phase 1: first AWMP cycle after legislative authority is established Phase 2: second AWMP cycle after legislative authority is established	Field scale values of ET, Pe, ETAW, Kc, AW, AU, EU (See section 4.2.2.1)	\$8-24 per acre per year plus \$2-5 per acre per year	Mean and standard deviation of field scale CCUF, AWUF, TWUF to be reported in water supplier's AWMPs
Crop consumptive use fraction (CCUF) $CCUF = ETAW/(AWf)$ Agronomic water use fraction (AWUF) $AWUF = [ETAW+AU]/(AWf)$ Total water use fraction (TWUF) $TWUF = (ETAW+AU+EU)/AWf$	Water Suppliers <25,000 acres, DWR, and others pending funding	Phase 3: third AWMP cycle after legislative authority is established		\$8-24 per acre per year plus \$2-5 per acre per year	

(1) Frequency of Calculations and Reporting: all Basin, supplier and field scale calculations should be done on annual time step and every five years reported in the AWMP;.

(2) The WMF is computed using water supplier or basin estimates of ETAW, RF, and AW.

(3) A Basin-Alliance is a group of water suppliers who jointly implement the methodology. See sections 3 and 4.

(4) CCUF, AWUF, TWUF for supplier and field scales are based on measured/estimated values of ETWA, AW, EU, AU. CCUF, AWUF, and TWUF would also be statistically calculated over the entire supplier's service area based on the mean and standard deviation of available field scale calculated values, if supplier provides on-farm evaluation of irrigation systems.

(5) Field scale implementation would be accomplished by a State, federal, and supplier joint on-farm irrigation evaluation (such as done by mobile labs) program based on voluntary farmer participation. Consistent with the Water Code when locally cost-effective, program shall be sponsored by supplier if serving equal or more than 25,000 acres of irrigated land. For suppliers serving less than 25,000 acres of irrigated land, participation is recommended only when funding is made available.

Acronyms: See also definitions in section 3. AU: agronomic use ; AWr, AWs, AWf: Basin, supplier, and field scale applied water (AW consists of surface and groundwater delivered to a boundary excluding non-agricultural uses and storage); CCUF: crop consumptive use fraction; AWUF: agronomic water use fraction, EU: environmental Use ; ETAW: Evapotranspiration of Applied Water; RF: recoverable flow; TWUF: total water use fraction; WMF: water management fraction; Pe – effective precipitation.

Supplemental Indicators

In addition to the four methods for quantifying the efficiency of agricultural water use, DWR has included in this report four indicators that would provide supplemental information about irrigation system performance and crop productivity. These indicators do not quantify the efficiency of agricultural water use, but help estimate the limits of potential efficiency and productivity. The purpose, application, and limitations of these four indicators are described in Section 5 and summarized in Table 5-1.

Four indicators are included to provide supplemental information on irrigation system performance and crop productivity. They do not quantify the efficiency of agricultural water use.

Indicators of Irrigation System Performance

Two indicators provide supplemental information on the performance of irrigation systems—distribution uniformity (DU) and delivery fraction (DF).

- **Distribution Uniformity (DU).** This is a measure of irrigation system performance - how evenly water is applied and infiltrates into the soil across a field during an irrigation event. It is not a measure of how efficiently water is used on the field. A well designed irrigation system applies water to crops as uniformly as possible to optimize crop production. DU is applicable at the field scale. Under CWC §10608.48(c), many water suppliers are required to provide on-farm irrigation evaluation service that include the determination of DU and other information of the irrigation system.
- **Delivery Fraction (DF).** This indicator evaluates the relationship (ratio) between the water delivered to water supplier customers and the agricultural water supplier's water supply. It is applicable at the water supplier scale. Under CWC §531.10 and CWC §10608.48, many water suppliers are required to determine and report aggregated farm gate delivery and water supply—the components used to calculate delivery fraction.

Indicator of irrigation system performance:

- *DU – distribution uniformity*
- *DF – delivery fraction*

Indicators of crop productivity:

- *PAW – Productivity of Applied Water Fraction*
- *VAW – Values of Applied Water Fraction*

Indicators of Crop Productivity

During ASC and subcommittee meetings, two indicators relating crop productivity to applied water were identified and discussed. DWR has reported statewide trends for these indicators in the 2009 update of the California Water Plan. The two crop productivity indicators provide information about the relationship and trends of crop yield and/or monetary value to the volume of irrigation water applied during production. They can indicate long-term changes or trends in agricultural production and income relative to applied water at larger spatial scales. However, these indicators do not quantify the efficiency of

agricultural water use nor economic efficiency (see Section 5, Box 5-1 Economic Efficiency).¹

Crop production depends on many factors other than the water to meet crop consumptive and non-consumptive needs, including water quality, climate, soil type, soil depth, crop parameters (variety), crop management (fertilizer and pest management, etc.) and water management (irrigation system, irrigation management, and water supply flexibility and reliability).

DWR cautions that the crop productivity indicators should not be used to draw conclusions about regional crop selection because many factors other than applied water can affect crop selection, crop production, and crop value in any given year and location and with changing crop markets.

The crop productivity indicators should not be used to draw conclusions about regional crop selection

Two indicators provide information on crop productivity: Productivity of Applied Water (PAW) and Value of Applied Water (VAW).

- **Productivity of Applied Water Fraction (PAW).** This indicator illustrates the relationship (ratio) between crop production in tonnage and the volume of applied water. It is most applicable at a statewide or county scale.
- **Value of Applied Water Fraction (VAW).** This indicator illustrates the relationship (ratio) between gross crop value in dollars and the volume of applied water. It is most applicable at the statewide and county scales.

¹ This indicator may substantially underestimate the final value of the commodity to the California economy. Example: alfalfa has a relatively low per acre farm gate value compared to permanent crops and vegetables, but it is the nutritional foundation of the state's highest value commodity – milk.

1 Introduction

The Water Conservation Act of 2009 (Senate Bill X7-7) directs the Department of Water Resources (DWR)—in consultation with the Agricultural Water Management Council, academic experts, and other stakeholders—to develop and report to the Legislature a proposed methodology for quantifying the efficiency of agricultural water use and a plan of implementation that includes estimated implementation costs, and types of data that would be needed to support the methodology. The legislation does not authorize DWR to implement the methodology.

This report is intended to improve the understanding of agricultural water use and provides illustrative examples to demonstrate the complexity of quantifying the efficiency of agricultural water use.

1.1 Purpose and Use of a Methodology

The purpose of the methodology proposed in this report is to describe practical methods for quantifying the efficiency of agricultural water use by irrigated agriculture that can help evaluate current conditions and strategies for improving agricultural water management. The report is intended to improve the understanding of agricultural water use and provide illustrative examples to demonstrate the complexity of quantifying the efficiency of agricultural water use.

The anticipated users of these methods are farmers, water suppliers, and regional water management groups, as well as nongovernmental organizations and local, State, federal, and tribal planners. The methods are not intended for non-irrigated agriculture such as dairies production areas, on-farm processing, or other agricultural operations not directly related to irrigated lands.

The methods are not intended for non-irrigated agriculture such as dairies production areas, on-farm processing, or other agricultural operations not directly related to irrigated lands.

1.2 Legislative Direction and Declarations from Senate Bill X7-7 (Statutes of 2009)

Quantifying the efficiency of agricultural water use was directed by policy statements and other language in the 2009 legislation – SB X7-7. Specifically, §10608.64 of the Act states:

§10608.64. The department, in consultation with the Agricultural Water Management Council, academic experts, and other stakeholders, shall develop a methodology for quantifying the efficiency of agricultural water use. Alternatives to be assessed shall include, but not be limited to, determination of efficiency levels based on crop type or irrigation system distribution uniformity. On or before December 31, 2011, the department shall report to the Legislature on a proposed methodology and a plan for implementation. The plan shall include the estimated implementation costs and the types of data needed to support the methodology. Nothing in this section authorizes the department to implement a methodology established pursuant to this section.

A Methodology for Quantifying the Efficiency of Agricultural Water Use

DWR identified further legislative direction in Chapter 1, General Declarations and Policy of the 2009 legislation. This chapter provided guidance in the assessment of methodology and development of an implementation plan for quantifying efficiency of agricultural water use that included the following:

§10608. The Legislature finds and declares all of the following:

- (a) Water is a public resource that the California Constitution protects against waste and unreasonable use.*
- (b) Growing population, climate change, and the need to protect and grow California's economy while protecting and restoring our fish and wildlife habitats make it essential that the state manage its water resources as efficiently as possible.*
- (c) Diverse regional water supply portfolios will increase water supply reliability and reduce dependence on the Delta.*
- (d) Reduced water use through conservation provides significant energy and environmental benefits, and can help protect water quality, improve streamflows, and reduce greenhouse gas emissions.*
- (e) The success of state and local water conservation programs to increase efficiency of water use is best determined on the basis of measurable outcomes related to water use or efficiency.*
- (f) Improvements in technology and management practices offer the potential for increasing water efficiency in California over time, providing an essential water management tool to meet the need for water for urban, agricultural, and environmental uses.*

§10608.4. It is the intent of the Legislature, by the enactment of this part, to do all of the following:

- (a) Require all water suppliers to increase the efficiency of use of this essential resource.*
- (e) Establish consistent water use efficiency planning and implementation standards for urban water suppliers and agricultural water suppliers.*
- (i) Require implementation of specified efficient water management practices for agricultural water suppliers.*
- (j) Support the economic productivity of California's agricultural, commercial, and industrial sectors.*
- (k) Advance regional water resources management.*

§10608.8.

(c) This part does not require a reduction in the total water used in the agricultural or urban sectors, because other factors, including, but not limited to, changes in agricultural economics or population growth may have greater effects on water use. This part does not limit the economic productivity of California's agricultural, commercial, or industrial sectors.

§10800

(e) There is a great amount of reuse of delivered water, both inside and outside the water service areas.

(f) Significant noncrop beneficial uses are associated with agricultural water use, including streamflows and wildlife habitat.

(h) Changes in water management practices should be carefully planned and implemented to minimize adverse effects on other beneficial uses currently being served.

The complete list of related CWC sections can be found in Appendix A.

1.3 Process

DWR began the process of developing methodology for quantifying the efficiency of agricultural water use by forming a subcommittee (known as A1) composed of Agricultural Water Management Council, academic experts, agricultural water suppliers, and environmental stakeholders. The A1 Subcommittee is a subgroup of the larger Agricultural Stakeholder Committee (ASC) that was formed to advise the DWR on implementation of the agricultural water conservation and planning provisions of Senate Bill X 7-7, the statutes of 2009. The ASC and A1 subcommittee met several times throughout the process of developing the methodology and preparing this report. DWR staff and consultants formed a project work team that met regularly to discuss and address the information and comments provided by the A1 and ASC members. Additionally, DWR conducted three public workshops with the goal of receiving comments from a broad spectrum of interested parties. ASC and A1 subcommittee meeting materials, interim products, and public comments were made available to the public on the DWR website at <http://www.water.ca.gov/wateruseefficiency/sb7/> and were considered by DWR in preparing this report. During the process, numerous approaches and metrics were considered; and those that were not included in the proposed methodology are listed in Appendix E.

The A1 subcommittee is composed of Agricultural Water Management Council, academic experts, agricultural water suppliers and environmental stakeholders. It is a subgroup of the larger Agricultural Stakeholder Committee (ASC).

1.4 Report Organization

This report is organized with the following sections:

Legislative Direction, Purpose, and Process. The context, purpose, and process for developing a methodology [Section 1].

Water Use and Water Use Efficiency in Agriculture. Water balances at different spatial scales are presented to show how water is used for irrigated agriculture and opportunities for water use efficiency [Section 2].

Methodology for Quantifying the Efficiency of Agricultural Water Use. A discussion of four methods to quantify the efficiency of agricultural water use [Section 3].

Plan of Implementation. Roles and responsibilities, implementing entities, data needs and sources, reporting, schedule/phasing, data management, and cost estimates that would be needed to implement the methodology [Section 4].

Supplemental Indicators. A discussion of indicators that provide supplemental information about irrigation system performance and crop productivity [Section 5].

Appendixes A through F. Selected sections of the (A) California Water Code, (B) maps, (C) calculation examples for methods and indicators, (D) parameter descriptions and calculations, (E) other metrics considered but not included in the methodology; and (F) glossary of terms.

2 Water Use and Water Use Efficiency in Agriculture

2.1 Water Use in Agriculture

Agriculture is important to California's economy and water is essential for irrigated agriculture (see Box 2-1 Farming, Water, and California's Economy). Agricultural water uses are met from precipitation, surface water diversions, groundwater pumping, and shallow groundwater. Surface water and groundwater used for irrigating crops are commonly referred to as *applied water*. The purpose of irrigation is to maintain soil moisture for crop use and soil salinity at levels that do not restrict crop growth.

Surface water and groundwater used for irrigation of crops are commonly referred to as applied water.

Various irrigation methods are used to apply water to irrigated lands in California, including traditional furrow, improved furrow, border/flood irrigation, micro (drip and other low application emitters), and sprinkler irrigation². Over the past 25 years, there has been a significant shift from gravity and sprinkler irrigation systems to drip and micro and subsurface systems.

Most irrigation water is supplied by agricultural water suppliers (irrigation districts, water districts, canal companies, etc.). Water suppliers deliver water to their customers' fields by using water storage and conveyance facilities. They may operate these water deliveries through open channels, or pipes and flow control structures and water measurement devices. Some water suppliers use their entire water source and recycle and reuse their tailwater (spills from the conveyance systems) within their service area boundary.

Some suppliers may reside in a basin or watershed, and the tailwater from some suppliers may flow to other suppliers, to streams and rivers, or to salt sinks. In some cases, agricultural water suppliers have/are forming basin alliances to improve water and water quality management on a larger basin scale.

² The results of DWR's 2010 irrigation system survey are posted at <http://www.water.ca.gov/landwateruse/surveys.cfm>

Box 2-1 Farming, Water, and California's Economy

Farming is an important part of California's economy and the daily lives of many Californians. As one of only five Mediterranean growing regions in the world, California is one of the most productive agricultural regions in the world. California agriculture produces more than 400 crops people—fruits and vegetables, nuts, grains, meat, dairy, cotton, and more—on more than 81,700 farms and ranches, employing about 800,000 people. California farmers and ranchers serve diverse customer needs, from small farmers producing for local markets to extensive international trade.

California agriculture is a \$37.5 billion annual industry, generating 12 percent of total U.S. agricultural revenue and \$100 billion in related economic activity. In addition, California exports 23 percent of the products grown and harvested in the state. California provides more than half the nation's fruits, nuts, and vegetables alone. The top 10 crops for export are almonds, rice, wine, pistachios, walnuts, dairy, table grapes, processing tomatoes, oranges, lettuce.

Water is an essential part of irrigated agriculture. In water year 2000 (an average year), California irrigated an estimated 9.6 million acres of cropland (includes multi-cropping) using roughly 34 million acre-feet of applied water. California farmers and water suppliers are constantly innovating, adopting new technologies, improving water and operational efficiencies, and reducing costs of production. DWR estimates that over the past 40 years, the rising real value of agricultural products, coupled with a reduction in applied water use, has nearly doubled the gross revenue generated per acre-foot of applied water (see California Water Plan Update 2009, Volume 4, Comparing Changes in Applied Water and Real Gross Value of Output for California Agriculture).

2.2 Understanding Water Use Efficiency

Water conservation refers to reducing the amount of water use, and implementing water use efficiency measures is a means of reducing water diverted or delivered to meet crop water requirements or other beneficial uses. Water conservation and water use efficiency may result in water savings and/or co-benefits including improved water quality, energy savings, and reduced greenhouse gas emissions. Water saved can be used to meet agricultural, urban, and environmental water demands. However, being more efficient in some circumstances may mean more costs and more energy use. On the other hand, applied irrigation water that becomes surface runoff or deep percolation that is recoverable may be used by other farmers, cities, or the environment. As a result, third party impacts should be fully considered before implementing any significant conservation or efficiency measures.

Agricultural water use can be categorized as consumptive (irrecoverable) or non-consumptive (recoverable). Consumptive use refers to water that is unavailable for reuse, e.g., evaporation, plant evapotranspiration, incorporation into plant biomass, seepage to a saline sink, or unavailability due to contamination. Non-consumptive use such as leaching or runoff, on the other hand, refers to water that is available for reuse (e.g., through return flows or groundwater recharge).

Agricultural water use can be categorized as consumptive (irrecoverable) or non-consumptive (recoverable).

While applying water for crop production, including crop transpiration and leaching salts from the root zone, other incidental uses may occur. Those uses that do not contribute to crop production include water transpiration from weeds and riparian vegetation and evaporation from reservoirs, canals, sprinklers, soil, and plant surfaces. Water uses for crop production (consumptive and agronomic use), environmental use as well as other incidental uses can be either consumptive or non-consumptive (See Table 2-1). In general, water uses that are incidental to crop production and environmental use may be reduced to increase the efficiency of agricultural water use, in particular irrecoverable flows.

Table 2-1 Consumptive (irrecoverable) and non-consumptive (recoverable) uses of water

	Consumptive use (irrecoverable)	Non-consumptive use (recoverable)
Water uses for crop (consumptive and agronomic) and environmental use	Crop or vegetative evapotranspiration	Leaching
	Evaporation for cooling	River/stream flows
	Plant evapotranspiration for frost control	
Water uses incidental to crop and environmental use	Deep percolation/flow to salt sink	Operational spills
	Phreatophyte evapotranspiration	Runoff
	Weed evapotranspiration	Deep percolation
	Reservoir and canal evaporation	

This report recognizes the ecosystem services and benefits that irrigated agriculture and agricultural crops provide, from wildlife habitat to carbon sequestration. While all co-benefits are not quantifiable, water dedicated for environmental purposes is included in quantifying the efficiency of water use. Thinking about water in a systems approach recognizes that simply reducing applied agricultural water may not necessarily result in a net benefit at the farm, basin or watershed levels, and that effective agricultural water stewardship may provide multiple ecosystem services (see Box 2-2 California Agricultural Stewardship - A Systems Approach).

To develop a methodology to quantify the efficiency of agricultural water use, a water balance approach was considered to look into the various components of water use in agriculture including water used for environmental use associated with irrigated lands (see Section 3). Other uses of water in agriculture—dairy production areas, washing products, etc.—are not included in the water balance because they represent small fractions of the total water use in most cases and are difficult to quantify.

A water balance is a representation of all sources and dispositions of water into, within, and out of a defined three dimensional boundary (such as a water supplier including its surface area and subsurface volume) over a defined period of time. From these water flow elements, various relationships can be evaluated to describe the current water management conditions and assess opportunities for change. Understanding components of a water balance and their relationships within a defined boundary is fundamental to understanding how efficient the water is used.

Agricultural water stewardship is “the responsible use and management of water that optimizes agricultural water use while addressing the co-benefits of water or food production, the environment, and human health.”

from: California Roundtable
for Food and Water Supply
<http://agwaterstewards.org/>

A water balance is a representation of all sources and dispositions of water into, within, and out of a defined boundary over a defined period of time

Box 2-2 California Agricultural Water Stewardship - A Systems Approach

California is facing significant challenges around the management of water for all users. For agricultural water use, understanding water systems means thinking about the use of water in agriculture and in the larger watershed. Taking a more expanded view of agricultural water use efficiency, agricultural water stewardship can be thought of as:

The responsible use and management of water that optimizes agricultural water use while addressing the co-benefits of water or food production, the environment, and human health.

This definition has been developed by a diverse group of California stakeholders, including policy, environmental and agricultural leaders, affiliated with the California Roundtable for Food and Water Supply, who understand that agricultural water management decisions need to consider the broader ecological, social, and economic context.

Thinking about water in a systems approach recognizes that simply reducing applied agricultural water may not necessarily result in a net benefit at the farm or watershed levels, and that effective stewardship may provide multiple ecosystem services. While growers are continually making improvements in their operations to ensure profitability and the resource base, they are doing so in a system; and gains in overall sustainability may mean the increased use of applied water or other input.

As an example, many growers in California use cover crops to provide nitrogen and improve soil quality. Cover crops may in fact require additional applied water, depending on the crop, rainfall, planting date and other factors. However, the overall resource base may be improved, by reducing applied synthetic nitrogen and improved soil quality.

Making smart water use decisions while minimizing environmental impacts and balancing all the trade-offs will help ensure the long-term viability of agricultural production for California.

For more information and case studies see <http://agwaterstewards.org/>

Because hydrologic, regulatory, distribution, and other features of a water balance are unique to a specific boundary, water balances can look different, reflecting the unique circumstances of different boundaries.

In this report, water use efficiency fractions that are a ratio of outputs from an agricultural system to an input to the agricultural system in volumes and/or depths of water were considered for quantifying the efficiency of agricultural water use – and they are referred to as methods. Input to an agricultural system is the volume of applied water. Outputs from agricultural systems include evapotranspiration from crops (ET), agronomic use (such as leaching salts), climate control (frost protection and cooling), environmental water use, runoff,

In this report, all water use efficiency fractions that are a ratio of outputs from an agricultural system to an input to the agricultural system in volumes and/or depths of water were considered for quantifying the efficiency of agricultural water use – and they are referred to as methods.

deep percolation, evaporation from open water surfaces, and evapotranspiration by non-crops (weeds, for example). The ratio of selected outputs (crop evapotranspiration, crop agronomic use, and environmental water use) to inputs (applied water) is used to quantify the efficiency of water use. Other outputs (evaporation from soil or water surfaces in excess of ET, evapotranspiration by non-crop vegetation, and flow to salt sinks, etc.) are not quantified and may be estimated in total as residual in the water balance. Crop evapotranspiration, crop agronomic uses (leaching, evaporation for cooling or application for frost control) and evaporation and evapotranspiration for environmental purposes are intended uses (outputs).

In order to quantify the inputs and outputs of an agricultural system, it is necessary to establish physical as well as time boundaries. These boundaries are referred to as spatial and temporal scales in this report. At each spatial scale (field, water supplier, and basin), selected components of the water balances are used to quantify the ratio of outputs to inputs for quantifying the efficiency of agricultural water use at each of those spatial scales for a given time scale (annual).


There is no single equation to represent the efficiency of agricultural water use at all scales. As the area within a boundary (scale) increases, the complexity and amount of data needed to calculate the water balance or water use efficiency generally increase. The water use efficiency at a smaller scale cannot be aggregated to arrive at water use efficiency at a larger scale. For example, although a weighted average (by acreage) of the water use efficiencies from fields within a water supplier boundary indicates the average field conditions in the supplier's service area, it should not be used to derive water use efficiency of the water supplier. Rather, the supplier's scale would take into account the flow of water to, from, and between fields (i.e., return flow, reuse, and seepage and spill flows) and water to and from groundwater storage, meeting environmental objectives, or other non-traditional uses that affect the operation and management of agricultural water. Therefore, understanding water use efficiency requires implementation of all the methods proposed in this report.

3 Methodology for Quantifying the Efficiency of Agricultural Water Use

The quantification of water use efficiency needs to recognize and consider the fate of water at different spatial levels. The water balance discussed here provides a useful framework for understanding and quantifying agricultural water use efficiency. Measurement and quantification of all the water balance components, such as parsing evaporation and transpiration into its parts, is a technical challenge; therefore, the components of the water balance used in this report to quantify the efficiency of agricultural water use are the components of the water balance that can be measured or quantified using models.

3.1 Spatial Scales Considered

For purposes of developing a methodology, DWR considered the following spatial scales that closely align with fields, delivery systems, and basin water management (Figure 3-1).

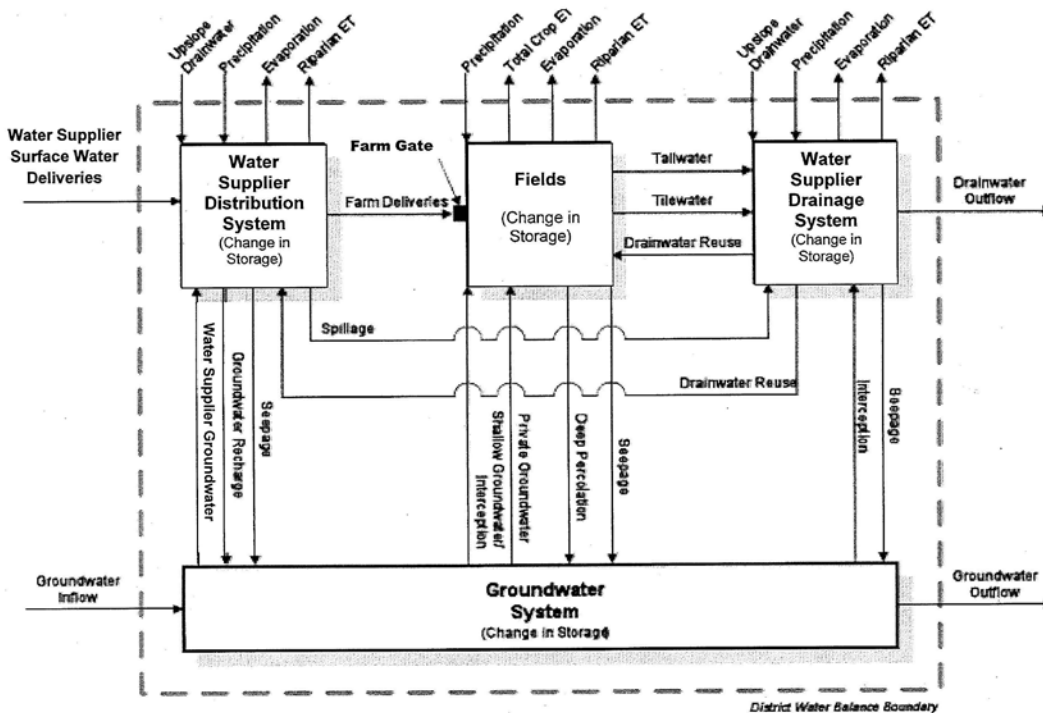

Source: Water Management Planner, Bureau of Reclamation, October 2000 (Modified)

Figure note: Crop ET is crop evapotranspiration, Riparian ET is evapotranspiration by vegetation, weeds, and phreatophytes, Evaporation is loss of water from surface of water or soils, Tailwater is runoff from fields, and Tilewater is the drainage flow captured from drains. Seepage is outflow of water from canals or reservoirs and Deep Percolation is downward flow of water into groundwater.

Figure 3-1 Schematic diagram of water supplier scale water balance

3.1.1 Water Supplier Scale or Basin Alliance Scale

The water supplier scale is a term used to define a boundary of agricultural irrigated land served by the water supplier. The water supplier is an entity, either publicly or privately owned, that distributes or sells water for ultimate resale to customers. The water supplier scale allows an assessment of attributes associated with the operation and management of a water delivery and drainage system within the defined service area of a water supplier. The goal of an agricultural water supplier is to use infrastructure and management to deliver water supplies to the customers' fields. Information regarding water flows at this scale allows for evaluation of the relation between water brought into the boundaries of water supplier and the effectiveness of meeting the primary goal of delivering water to the fields for meeting crop water needs and additionally providing for efficient delivery of the water suppliers system to improve water use efficiency³.

The water supplier scale allows an assessment of attributes associated with the operation and management of a water delivery and drainage system within the defined service area of a water supplier.

According to CWP, California has about 9 million acres of irrigated land (DWR 2009). DWR has identified 259 agricultural water suppliers in the state covering 6.9 million acres of irrigated land. Table 3-1 presents the number of water suppliers and irrigated acres, known to DWR, in four size categories.

Table 3-1 Agricultural water suppliers known to DWR (2011)

Acreage categories (A), acres	Number of suppliers	Irrigated lands, acres	Federal suppliers	
			Number of suppliers	Acres
A < 2,000	50	49,000	---	---
2,000 ≤ A < 10,000	91	486,000	27	142,000
10,000 ≤ A < 25,000	46	680,000	21	337,000
A ≥ 25,000	72	5,694,000	30	2,455,000
Total	259	6,909,000	78	2,934,000

Federal water suppliers – part of total number of water suppliers

Basin scale allows an assessment of a variety of attributes associated with basin water use and management within the basin boundary by two or more water suppliers. Because recoverable flows from one supplier may be used in another supplier's service area, the basin alliance scale is proposed as an option. Water balance components at a basin are similar to those of water supplier. Details of the basin alliance are described in Section 4.

Basin scale allows an assessment of a variety of attributes associated with basin water use and management within the boundary.

At a basin scale, water is used on two or more water supplier areas. Each supplier may have its own independent water supplies. But the recoverable flows from one supplier may be used as a source of water supply for another supplier in the

³ Water supplier is defined by Section 10608.12 (a) of CWC as "Agricultural water supplier" means a water supplier, either publicly or privately owned, providing water to 10,000 or more irrigated acres, excluding recycled water. "Agricultural water supplier" includes a supplier or contractor for water, regardless of the basis of right, that distributes or sells water for ultimate resale to customers. "Agricultural water supplier" does not include DWR. For purposes of Section 531.1 (b) of the CWC "Agricultural water supplier" means a supplier either publicly or privately owned, supplying 2,000 acre-feet or more of surface water annually for agricultural purposes or serving 2,000 or more acres of agricultural land. An agricultural water supplier includes a supplier or contractor for water, regardless of the basis of right, which distributes or sells water for ultimate resale to customers.

basin. Water balance inputs into the basin are surface water and groundwater flows and precipitation; outputs are evaporation, crop evapotranspiration non-crop evapotranspiration (such as environmental uses), non-agricultural uses, and surface and subsurface outflows. The time scale for a water balance calculation is generally over a period of a year.

Water Supplier Scale Water Balance

Inputs and outputs of the water balance at a water supplier scale are conceptually similar to those listed above for a basin. The components of the water balance at a supplier scale are shown in Figure 3-1. Water diverted into a supplier's service area distribution system may be stored in short-term regulating storage from which water may be depleted by evaporation or infiltration into an aquifer as deep percolation. Water supplies from storage or directly from a source, whether surface water or groundwater, are conveyed to suppliers' customers by supplier and farm-level conveyance systems. Water also leaves the conveyance system as evaporation and seepage or evapotranspiration. Conveyance systems may also have spills during operation that may be captured and recycled or may flow into streams or infiltrate into groundwater aquifers.

Specific water uses include crop consumptive use, agronomic uses such as water application prior to seeding, flooding fields to hasten the decomposition of straw which has a dual environmental purpose of providing habitat for migrating fowl. Other environmental uses may include sustaining riparian habitat and supporting endangered species.

In Figure 3-1 (see also Table 2-1) Consumptive Uses (irrecoverable) for crop and environmental objectives are crop evapotranspiration (ET), Riparian ET or evaporation for cooling. Consumptive Uses that are incidental to crop and environmental uses are deep percolation to salt sinks, Riparian ET if by weeds or phreatophytes, and canal evaporation. Non-consumptive Uses (Recoverable) are leaching/seepage/deep percolation and drainage outflow to streams or rivers. Non-consumptive Uses (Recoverable) that are incidental to crop and environmental uses are spills, tailwater, deep percolation.

Some of the deep percolation and runoff may recharge groundwater aquifers or flow into streams and rivers, creating a source of supply for other water users. Water suppliers use the recoverable flow in a reuse system, or it flows to downstream suppliers. Although some surface and subsurface flows are recoverable, the reduction of recoverable flows is desirable to improve water quality and reduce energy use and greenhouse gas emissions. After running off the field, recoverable flows are generally higher in nutrients and energy may be needed to reuse water. Prevention or reduction of irrecoverable flows creates water savings that can be used for other beneficial uses.

Water suppliers are defined in sections 10608.12(a) and 531.1(b) of the California Water Code.

Field scale assessments allow an operator to evaluate the performance of an irrigation system for a particular crop at a particular point in time or across a defined time period, such as a growing season.

3.1.2 Field Scale

The water delivered to farms is used for irrigation of crops to meet the crop consumptive use and agronomic use (further discussed in this section). Some water may also be used at the farm level for environmental purposes.

Environmental water either evaporates or flows into streams or infiltrates into groundwater aquifers.

The field scale, a term used to define the boundary of a parcel(s) of land served by an irrigation method or system, allows an assessment of a variety of attributes associated with irrigation system(s) and management within a field. Field scale assessments allow an operator to evaluate the performance of an irrigation system for a particular crop at a particular point in time (such as an irrigation event) or across a defined time period, such as a growing season. This assessment will allow an operator to assess the effectiveness of the existing irrigation system and its management to meet the water needs of the crop and minimize deep percolation, non-crop evaporation, and surface outflows.

In some cases, more than one field is irrigated from the same supplier turnout. If all fields are using the same kind of irrigation system to irrigate the same crop, the group of fields can be assessed as one field. If the individual fields are growing different crops or using different kinds of irrigation systems, they should not be grouped into a single measurement/evaluation; and all individual crops/irrigation systems should be treated separately for quantifying the efficiency of water use. If the field-level efficiency is to be quantified for one or more such fields, additional effort is required to measure or estimate the water delivered to each of the fields.

If the individual fields are growing different crops or using different kinds of irrigation systems, they should not be grouped into a single measurement / evaluation; and all individual crops/irrigation systems should be treated separately for quantifying the efficiency of water use.

Field Scale Water Balance

A water balance schematic at the field scale is shown in Figure 3-1. Irrigation water applied (applied water) to the field is used to meet the various types of crop requirements including crop evapotranspiration (transpiration from crops and evaporation from soil surface), soil salinity leaching requirement, and other agronomic requirements. Some of the applied water may percolate beyond the root zone and may not be available for crop uptake within the field but may become available for use beyond the field scale or flow into salt sinks.

Conversely, shallow groundwater may move into the root zone by capillary rise for crop uptake, or groundwater may be used at the field scale. Tailwater or tile water may be captured and reused on the same field, may flow out of the field and be reused on other fields, may support environmental water use in and along the drains, or may be lost to non-crop evapotranspiration or salt sinks. Some of the crop water requirements may be met through rainfall. Depending on the slope, soil type, timing, frequency, and intensity of precipitation, only a fraction of the total rainfall may be used by crops.

Agricultural water use that benefits crop production includes crop evapotranspiration, leaching requirement, climate control (cooling and frost

protection), soil preparation, and evapotranspiration by non-crops that are used as wind breaks.

Some amount of the applied water is used to leach excess amounts of salt that is present in the soil below the root zone to make an optimum condition for crop production. Different crop types and different varieties of the same crop can have different tolerances to salinity. This leaching requirement is the amount of water required to maintain soil salinity at an acceptable level and is estimated using the ratio of the electrical conductivities of irrigation water and drainage water. Water applied in excess of the leaching requirement that goes to deep percolation reduces field scale water use efficiency, but may be recovered later or elsewhere at the supplier or basin scale. However, achieving water use efficiency at the field scale saves water at the field and helps improve water quality, reduce energy use, reduce non-crop evapotranspiration and irrecoverable flows.

Water may also be applied for cooling of crops and frost protection. The amount of water used for cooling and frost protection depends on crop type and weather parameters such as humidity and temperature and on the characteristics of the irrigation system and its management. Although some amount of water used for climate control may evaporate, the rest infiltrates into the soil or runs off. Some infiltrated water may become available for crops to consume or result in deep percolation, reducing field scale water use efficiency.

3.2 Water Use Efficiency Quantification Methods

The methodology proposed by DWR in this report consists of four methods and associated procedures to quantify the efficiency of agricultural water use at different spatial scales, hereafter referred to as Water Use Efficiency Quantification Methods (Methods). A methodology consists of a collection of the methods that are available for quantification of different attributes of efficiency of agricultural water use at different scales. These methods are not intended for non-irrigated agriculture such as dairies production areas (irrigated areas in a dairy production are considered irrigated lands), on-farm processing, or other agricultural operations not directly related to irrigated land.

The primary approach for quantifying the efficiency of agricultural water use is through evaluating the relationships among particular components of a water balance. Simply stated, for the purposes of quantifying the efficiency of agricultural water use the outputs of Crop ET, and Riparian ET for environmental purposes, and any water used for agronomic practices (weather in the form of ET or deep percolation) are compared to the applied water (input into the boundary).

These relationships may include volume of water use attributed to evapotranspiration, agronomic practices as well as environmental uses compared to the volume of applied water within the boundary under consideration. The

water use efficiency quantification methods evaluate the efficiency of water applied intended for irrigated agriculture and meeting environmental objectives. Each of the four methods is described below in detail.

The water use efficiency quantification methods reported at various spatial scales provide valuable information to growers and their associated agricultural water suppliers or basin alliances. And to the extent the methods are reported beyond the field or supplier scale, they can also provide insight and understanding to regional, State, and federal policy-makers and planners. Example calculations for each method are presented in Appendix C.

Results of these methods cannot be viewed independently. Each method provides a unique understanding of the efficiency of agricultural water use in an area. In fact, using these methods in tandem allows not only for quantifying each water use fraction separately, but for comparing the proportions of water used for different purposes (e.g., consumptive use, agronomic use, environmental use).

The following four methods when taken together can help characterize existing water uses, as well as, identify ways to improve water use efficiency and inform water management decisions about alternative efficient water management practices (EWMP).

Method 1: Crop Consumptive Use Fraction (CCUF). *Purpose:* It quantifies the efficiency of water use for the purpose of crop evapotranspiration. It allows for evaluation of the relationship between the consumptive use of a crop and the quantity of water applied within the boundary. Method 1 is recommended for field, water supplier, and basin scales.

$$\text{Equation 1} \\ \text{CCUF} = [\text{ETAW}]/[\text{AW}]$$

- CCUF is calculated where **Evapotranspiration of Applied Water (ETAW)** is crop evapotranspiration minus the amount of water supplied to the crop by precipitation,

$$\text{Equation 1-A} \\ \text{ETAW} = \text{ET} - \text{Pe}$$

- **Crop evapotranspiration (ET)** is transfer of water to the atmosphere by the combined processes of evaporation from crop and soil surfaces and transpiration from crops. It is the amount of water that the crop needs for optimal growth and to produce yield. In quantifying the efficiency of agricultural water use at all spatial scales, the implementing entity can either measure ET or estimate it using theoretical and/or empirical equations. Measurement methods use complex equipment such as Eddy Covariance, Bowen Ratio, and lysimeters, which are very complex and therefore costly. The most

Appendix C includes example calculations for each of the four methods at relevant spatial scales.

Method 1 quantifies water use efficiency for the purpose of crop evapotranspiration.

$\text{CCUF} = [\text{ETAW}]/[\text{AW}]$
AW - applied water
CCUF- crop consumptive use fraction
ETAW - evapotranspiration of applied water
ET - crop evapotranspiration
ETo - reference evapotranspiration
EWMP - efficient water management practice
Kc - crop coefficients
Pe – effective precipitation

Example Application:
An environmental coalition wants to demonstrate the improvements in efficiency that would result from projects. The coalition will document the existing CCUF of four different fields served by four unique stream diversions. An estimated reduction in applied water from modified irrigation management will be shown to reduce one of the factors, applied water, and show an improvement in CCUF.

commonly used approach for estimating ET is to use reference evapotranspiration (ET_o) and crop coefficients (K_c), as described by DWR California Irrigation Management Information System (CIMIS) (<http://www.cimis.water.ca.gov/cimis/welcome.jsp>). Other equivalent methods are also used.

Equation 1-B $ET = K_c * ET_o$

- **Effective precipitation (P_e)** is the fraction of precipitation water that is available for crops to use. Since a part of the precipitation becomes runoff, deep percolation, and evaporation, only a fraction of the total precipitation is available to satisfy crop water needs. P_e depends on many factors including the slope of the land, soil type, soil moisture content, rainfall characteristics, weather conditions, and plant type. It is highly recommended that the method used has proven accuracy for estimating P_e for the area of interest. A soil moisture balance might be needed to determine with less uncertainty how much precipitation is available for crop uptake. This is especially important in higher precipitation zones, such as the Sacramento Valley, where higher precipitation values do not always contribute to higher soil moisture storage for crop uptake. See Appendix D for additional information and references for estimating P_e.
- **Applied water (AW)** is the total volume of water that is applied to field(s) within an area (field, supplier, or basin) to meet the crop evapotranspiration, agronomic, and environmental use from any source, surface water (including tailwater reuse) or groundwater, public or private, including initial soil moisture in the soil profile that is not from precipitation. Unique values at each spatial scale include:
 - **Field scale applied water (AW_f)** is quantity of water derived from supplier's surface or groundwater measured deliveries (adjustments are needed if the entire delivery is not applied to the field) and private groundwater pumping. Alternatively, AW_f at the field may be measured with a water measurement device.
 - **Water supplier scale applied water (AW_s)** is quantity of water derived from supplier's measured surface or groundwater deliveries and private groundwater pumping within the supplier's service area. Water used for non-agricultural crop and non-environmental uses within the supplier's boundary [Municipal and Industrial (M&I), dairy production areas, etc.] are excluded.
 - **Basin scale applied water (AW_b)** is quantity of water derived from all supplier's measured surface or groundwater deliveries and private groundwater pumping in the basin. Water used for non-agricultural

- crop and non-environmental uses within the basin boundary (M&I, dairy production areas, etc.) are excluded.
- **County scale applied water (AWc)** is quantity of water derived from suppliers and groundwater pumping within a county. This value may be estimated by interpolation. Water used for non-agricultural crop and non-environmental uses within the county (M&I, dairy production areas, etc.) are excluded.

Method 2: Agronomic Water Use Fraction (AWUF). *Purpose:* It quantifies the efficiency of water use for the purpose of crop evapotranspiration and agronomic use. It allows for evaluation of the relationship between the crop use, agronomic use of a crop and the quantity of water applied to an area. Method 2 is recommended for field, water supplier, and basin scales.

AWUF is calculated with the equation

Method 2 allows for evaluation of the relationship between the agronomic use of a crop and the quantity of water applied to an area.

$$\text{Equation 2}$$

$$\text{AWUF} = [\text{ETAW} + \text{AU}] / \text{AW}, \text{ where}$$

AU is agronomic use in inches or acre feet per year

- **Agronomic use (AU)** is the portion of applied water directed to produce a desired agricultural commodity, such as water applied for salinity management or frost control, decomposition, and other water applications essential for production of crops.
- **Leaching requirement (LR)** is the minimum leaching fraction (LF) that is required over a growing season for a particular quality of water to achieve maximum yield of a given crop (Letey et al., 2011). LF is the fraction of the total applied water that drains below the plant root zone. LR is used to estimate the amount of water needed to leach out excess salts from the root zone and create an optimum condition for crop production. It is the minimum LF that corresponds to the maximum salinity level that a specific **crop** can tolerate. LR is estimated using the ratio of the electrical conductivities of irrigation water and drainage water.

AWUF - agronomic water use fraction
AU - agronomic use
LF – leaching fraction
LR - leaching requirements

$$\text{Equation 2-A}$$

$$(\text{LR} = \text{ECiw} / \text{ECdw}), \text{ where}$$

ECiw is the electrical conductivity of irrigation water (decisiemens per meter-dS/m), and ECdw is the electrical conductivity of drainage water (dS/m). Decisiemens is a measure of electric conductance.

In some cases, it may be difficult to determine the exact location of the root zone depth and take measurements of the electrical conductivities of drainage water. Under such circumstances, alternative methods can be utilized to estimate leaching requirement. Studies have shown, for example, that EC_{dw} can be accurately estimated from the electrical conductivities of root zone saturation extract and irrigation water (Rhoades, 1974). According to Rhoades (1974),

$$EC_{dw} = 5EC_e - EC_{iw},$$

where EC_e is the average electrical conductivity of the saturation extract in the root zone and EC_{iw} is the electrical conductivity of irrigation water. LR can, therefore, be estimated from

EC_e can either be measured at different depths within the root zone, and average values calculated, or estimated from salinity tolerances of various crops. The Food and Agriculture Organization of the United Nations (FAO-UN) publication paper #29 (Ayers and Westcot, 1994) lists the salt tolerance data for various crops. EC_e values can, therefore, be obtained from Table 4 of the FAO publication or other published works. See Appendix D for crop salt tolerances and yield potential.

Equation 2-B

$$LR = EC_{iw} / [(5 \times EC_e) - EC_{iw}], \text{ where}$$

EC_e is the crop salt tolerance threshold at no yield reduction.

Water in excess of the leaching requirement that goes to deep percolation would reduce water use efficiency at that scale. It should be noted, however, that due to uncertainties in quantifying leaching requirements and due to low distribution uniformities of applications, some amount of water in excess of leaching requirement may be reasonable.

- **Climate control** may require the use of some water for cooling of crops and frost protection. The amount of water used depends on crop type and weather parameters such as humidity and temperature. Application of water for climate control should start when temperature reaches critical thresholds for each crop and continued until the temperature becomes more favorable. Weather station networks such as CIMIS can provide the temperature and humidity data needed to determine when to turn sprinklers on and off. Although significant amount of water used for climate control may evaporate, the rest will infiltrate into the soil and become available for crops to

The amount of water required to remove salts from the root zone area is estimated using the ratio of the electrical conductivities of irrigation water (EC_{iw}) and drainage water EC_{dw} .

$$LR = EC_{iw} / EC_{dw}$$

consume. Currently, there are no standard procedures to estimate the amount of water needed for climate control and the portion of climate control water that will be consumed by plants. DWR recommends use of best professional practices in determining climate control use.

DWR would develop guidelines for agronomic use in phase 2 of the implementation plan.

Method 3: Total Water Use Fraction (TWUF). *Purpose:* This method quantifies the efficiency of water use to meet crop consumptive use, crop agronomic use, and environmental use. It considers the ratio of agronomic (AU) and environmental (EU) water use, in addition with ETAW, to the applied water. Method 3 is recommended for field, water supplier, and basin scales. TWUF is calculated with the equation:

Method 3 quantifies the efficiency of water use to meet crop consumptive use, crop agronomic use, and environmental use

Equation 3

$$TWUF = [ETAW + AU + EU] / [AW], \text{ where}$$

ETAW, AU, and AW are the same as defined above

- **Environmental use (EU)** is the portion of applied water directed to environmental purposes, including water to produce and/or maintain wetlands, riparian or terrestrial habitats. Applied water associated with a mandated environmental objective but ultimately used for ETAW or AU in the production of any agricultural commodity would be characterized as applied water for an environmental need. Currently there is no clear standard for environmental water use or standard procedures for estimating EU, unless the EU is prescribed by regulation or permit conditions. Since no established standards exist for EU, the quantity of applied water estimated for intended EU is based on accepted professional practices. DWR will develop guidelines for environmental use during phase 2 of the implementation plan.

Method 4: Water Management Fraction (WMF). *Purpose:* This method quantifies the efficiency of water management. Comparison of WMF and CCUF (calculated from Equation 1) within the same scale (supplier or regional) provides an opportunity to recognize that a portion of water that is applied by a water supplier or applied to a region for crop irrigation, but is not used by crops, may be recoverable flow (see example calculations in Appendix C). Method 4 is recommended for water supplier and basin scales. WMF is calculated with the equation:

Comparison of WMF and CCUF within the same scale provides an opportunity to recognize that a portion of water applied by a water supplier or applied to a region for crop irrigation, but not used by crops, may be recoverable flow

Equation 4

$$WMF = (ETAW + RF) / (AW), \text{ where}$$

ETAW and AW are defined as above

- **Recoverable flow (RF)** is the amount of water leaving a given area as surface flows to non-saline bodies or percolation to usable groundwater that is available for supply or reuse. RF is calculated from surface return flows using gauge data and estimates of deep percolation while excluding evaporation and flows to salt sinks.

In regions where there is little recoverable flow (i.e., water exits the defined boundary to salt sinks or other unusable water bodies), the WMF would be closer to that calculated under Method 1, CCUF. Method 4 recognizes that unconsumed water may be useable elsewhere or at another time within the water management system.

The components of the methods used to quantify the efficiency of agricultural water use are either empirical (measured or observed) or modeled (calculated/estimated). Table 3-2 illustrates the empirical and modeled components of the four methods.

Some components of the equations are empirical (measured or observed) and most of them are modeled (calculated/estimated).

Table 3-2 Empirical and modeled components of the water use efficiency quantification methods

Method-scale	Equation	Empirical	Modeled
CCUF-basin	$ETAW/AW$		ETAW,AW,
AWUF-basin	$[ETAW+AU]/AW$		ETAW, AU,AW
TWUF- basin	$[ETAW+AU+EU]/AW$		ETAW, AU, EU,AW
WMF-basin	$[ETAW+RF]/AW$		ETAW, RF, AW
CCUF-supplier	$ETAW/AW$	AW	ETAW, AW
AWUF-supplier	$[ETAW+AU]/AW$	AW	ETAW, AU,AW
TWUF-supplier	$[ETAW+AU+EU]/AW$	AW, EU	ETAW,AU, EU,AW
WMF-supplier	$[ETAW+RF]/AW$	AW	ETAW, RF, AW
CCUF-field	$ETAW/AW$	AW	ETAW
AWUF-field	$[ETAW+AU]/AW$	AW	ETAW, AU,AW
TWUF-field	$[ETAW+AU+EU]/AW$	AW, EU	ETAW,AU,EU

4 Plan of Implementation

The plan of implementation presented in this section describes an approach and identifies roles, implementing entities, data needs and sources, reporting, schedule/phasing, data management, and cost estimates that would be needed to implement the methodology (methods) proposed in this report for quantifying the efficiency of agricultural water use.

Implementation schedule is contingent upon legislative authority and adequate funding.

The legislation does not authorize implementation of this proposed methodology and does not identify sources of funding for its implementation. DWR recommends that if any of the methods proposed in this report are authorized for implementation, necessary sources of funding be identified/appropriated to support their implementation at the relevant spatial scales. In the implementation cost section, new funding needed for implementation is estimated.

4.1 Approach and Roles

Implementation would benefit from collaboration with the Agricultural Water Management Council, agricultural water suppliers, academic and research institutions and California universities, and other cooperating agencies and organizations. DWR recommends that if the proposed methodology is implemented, that it be carried out using existing programs to the extent possible, and by expanding them, creating new programs, and/or reviving past programs as needed to avoid redundancy and reduce implementation costs. It is proposed that the methodology be implemented using a phased approach.

It is proposed that the methodology be implemented using a phased approach.

Existing programs may include:

- Agricultural water suppliers' preparation of agricultural water management plans (AWMPs) required by CWC §10820
- Implementation of Efficient Water Management Practices required by CWC §10608.48.
- Agricultural water suppliers' reports of estimated efficiency improvements as required by §10608.48 (d).
- Agricultural water suppliers reporting data as required by §10608.48(e)
- Agricultural water suppliers aggregated farm-gate water delivery reporting per CWC §531.10
- Preparation of the California Water Plan updates by DWR.

These existing legislative requirements provide a well-defined and convenient mechanism for the agricultural water suppliers to submit their calculations of the water use efficiency quantification methods to DWR. While CWC does not require water suppliers to quantify efficiency of agricultural water use or implement the proposed methodology, the agricultural water suppliers AWMP may be used as a mechanism to report the results of calculations of the crop consumptive use fraction, agronomic water use fraction, total water use fraction, and water management fraction as well as the means and standard deviations of

the on-farm (field scale) values of CCUF, AWUF, and TWUF within their service areas. DWR proposes that implementation of the proposed methodology be done by agricultural water suppliers as defined by the CWC 10608.12(a) (see Appendix A).

Although Section 10608.64 of the California Water Code does not specify the implementing agency, DWR proposes that it would assume the following responsibilities, if and when the implementation is authorized and the necessary resources are provided. DWR would assume this role because it can provide consistency in implementation and can help in maintaining and disseminating the quantification of efficiency of agricultural water use information reported to it by the agricultural water suppliers or others.

- Develop a guidebook for consistent implementation of the methodology including refinements or improvements in data and procedures.
- Collect and maintain the data submitted to DWR in a database and disseminate the information in the California Water Plan update process.
- As DWR updates the Efficient Water Management Practices per CWC §10608.49(h), it would include the calculations of the above methods as a metric of reporting estimates of water use efficiency improvements by the agricultural water suppliers in their AWMPs.
- Provide coordination among entities involved in implementation of the proposed methodology.

Agricultural water suppliers would report in their AWMPs their calculations of the four methods:

CCUF – crop consumptive use fraction

AWUF – agronomic water use fraction

TWUF – Total Water Use Fraction

WMF – Water Management Fraction

4.2 Water Use Efficiency Quantification Methods

4.2.1 Water Supplier or Basin Alliance Scales

Implementation of the proposed methodology (Methods 1-4) would be responsibility of the agricultural water suppliers. Agricultural water suppliers optionally can form an alliance within a basin and implement the methodology.

A basin alliance scale is an area formed by a group of agricultural water suppliers within one watershed.

A basin alliance scale is an area formed by a group of agricultural water suppliers within one watershed. Watershed is defined as an area bounded by a perimeter where subsurface or surface flows drain to a single or multiple outlets serving the area. Basin may be positioned on one or more groundwater basins. Groundwater basin is defined as an alluvial aquifer or a stacked series of alluvial aquifers with reasonably well-defined boundaries in a lateral direction and having a definable bottom.

Basin Alliance. Agricultural water suppliers whose service area boundaries are within one watershed may form a partnership and apply the methodology for quantifying the efficiency of agricultural water use at the basin scale based on the following considerations:

- Agricultural water suppliers forming the basin alliance would formulate basin objectives demonstrating water use efficiency benefits gained by forming a basin alliance.
- The surface inflows into and outflows from the basin alliance boundary would be measured.
- Agricultural water suppliers would have water supply or drain water (surface or subsurface drainage) exchange across boundaries.
- The boundary of the basin may cross county or hydrologic boundaries.
- In general, agricultural water suppliers would only belong to only one basin alliance for the purposes of establishing a partnership for implementation of the methodology for quantifying the efficiency of agricultural water use. In the case of tiered alliances, the larger alliance would include all of the individual water suppliers that belong to subordinate basin alliances.
- Individual agricultural water suppliers would apply the delivery fraction (note that DF is an indicator discussed in Chapter 5) to their respective service area.
- Basin-alliance individual agricultural water suppliers equal or greater than 25,000 acres (and greater than 10,000 acres but less than 25,000 acres if funding is available) would implement CCUF, AWUF, TWUF and to the extent possible WMF, and report for their individual service areas.

Water suppliers greater than 25,000 irrigated acres are already required to prepare AWMPs, implement EWMPs, and report efficiency improvements in the AWMPs as required by CWC §10608.48 (d)

4.2.1.1 Data Needed to Support the Methodology

Data needed to support the methodology at this scale include reference evapotranspiration, crop coefficient, effective precipitation, land use data, crop types, irrigated acreage, water use data including water supplies entering the supplier's Distribution System (WS), applied water, agronomic use, environmental use, recoverable flow, and any storage or depletion from the supplier reservoirs. Timescale for computation of the crop consumptive use fraction, agronomic water use fraction, total water use fraction, and water management fraction at the supplier scale is yearly based on annual values of the components of these equations for the supplier (annual Evapotranspiration of Applied Water, AW, EU, AU, and WS).

If water suppliers, as required by the section 10608.48 provide on-farm evaluation, a statistical analysis is recommended using a mathematically accepted approach toward achieving a science-based outcome. In this approach, one would determine a statistical mean and standard deviation of field efficiency within a supplier area or basin. This would require a random sample at that would

*AU – agronomic use
AW – applied water
AWUF – agronomic water use fraction
CCUF – crop consumptive use fraction
ETAW – Evapotranspiration of Applied Water
ETo – reference evapotranspiration
EU – environmental use
Kc – crop coefficient
Pe – effective precipitation
RF – recoverable flow
TWUF – total water use fraction
WMF – water management fraction
WS – water supply*

represent irrigation system types in order for the assessment to be statistically sound. The evaluation could be achieved by utilizing, on-farm evaluation.

4.2.1.2 Data Sources, Quality, and Limitations

The quality of existing data needed to implement the methodology varies significantly from supplier to supplier and across data categories. This presents the largest challenge to generating useful information from the methodology. Some data are measured with a high degree of accuracy; some at a lower accuracy; and some important data are currently not measured and would be estimated. Table 4-1 provides a summary of data needed, likely sources of data for supplier level methods, and identifies options, recommends an option and needed improvements.

Table 4-1 Water supplier data needed, data sources, and options for quantifying the efficiency of agricultural water use

	Data needed	Source of data/options	Notes
Crop ET and ETAW	Crop area	Water supplier records	Water suppliers equal or greater than 25,000 acres, are required by CWC 10826 (b) to describe the quantity of water use in the service area.
	Pe	Calculated from precipitation data from CIMIS or equivalent source	
	Kc	CIMIS or equivalent	
	Crop ET	Calculated using CIMIS Eto and Kc or equivalent source based on water supplier scale or aggregate from field scale data, or processed satellite imagery	
	ETAW	Calculated (from Etc and Pe) based on water supplier scale, aggregate from field scale data, or processed satellite imagery	
Applied Water (AW)	Surface deliveries	Water supplier records or private water rights diversions from aggregated farm-gate deliveries	Water suppliers equal or greater than 2,000 acres are required by CWC 531.10 to measure water if locally cost effective and suppliers greater than 25,000 measure delivery CWC 10826(b)(7)(A).
	Groundwater deliveries	Water supplier records or groundwater use records, estimates from modeling	
	Private groundwater use	Private groundwater use data, estimates from power use, estimated by modeling	Groundwater use may be unmeasured
Agronomic use (AU)	Leaching requirement	Calculated at the supplier scale from equations in this report or use best professional practices or aggregated from field scale values	Water suppliers equal or greater than 25,000 acres are required by CWC 10826 (b) to quantify overall water budget and tabulate water uses.
	Climate control	Use best professional practices. DWR may develop guidelines or methods in future	
	Others	Seed bed preparation etc. Use best professional practices	

Table continued on next page with acronyms in table notes

Table 4-1(cont'd.) Water supplier data needed, data sources, and options for quantifying the efficiency of agricultural water use

	Data needed	Source of data/options	Notes
Environmental Use (EU)	Water dedicated to environmental purposes (by regulation or permit)	Actual environmental water use required by regulation	Water suppliers equal or greater than 25,000 acres, CWC 10826 (b) to describe the quantity of water uses including environmental water uses.
	Other	Studies or data collected from fields	
Recoverable Flow (RF)	Surface drainage	Actual surface outflow measured	Water suppliers equal or greater than 25,000 acres, CWC 10826 (b) (6) and (7)(C) to quantify drainage and water budget
	Deep percolation (drainage)	Estimated by modeling	

Acronyms: Pe – effective precipitation , CIMIS – California Irrigation Management Information System, Kc – crop coefficient, ET - evapotranspiration, ETo – reference evapotranspiration, Etc – crop evapotranspiration.

4.2.1.3 Data Collection and Reporting Responsibility

Data collection at the water supplier scale is the responsibility of the agricultural water suppliers required to prepare and submit agricultural water management plans. Water suppliers would report the data they gather and report in their AWMPs every five years. Agricultural water suppliers subject to the water management planning provisions of SB X7-7 (greater than 25,000 irrigated acres, and between

10,000 and 25,000 irrigated acres if sufficient funding is provided) would already be providing in their AWMPs some of the information, which are needed to support the methodology. This information is required under CWC 531.10 and 10608.48 are identified in Table 4-1, see also Box 4-1 on the next page. The agricultural water suppliers would include the data, assumptions, and results of quantification of CCUF, AWUF, TWUF, and WMF at the supplier scale and summary of the field scale CCUF, AWUF, TWUF, in their agricultural water management plans. DWR would include the summary of water supplier scale field scale values in the CWP update.

Box 4-1 A Brief Description of Reporting Requirements under the Statutes

Agricultural Water Management Plan (AWMP) and Efficient Water Management Practices (EWMPs) Reporting

AWMPs per SB X7-7 Chapter 3 Article 1 10820 (a) states that an agricultural water supplier shall prepare and adopt an agricultural water management plan on or before December 31, 2012, and shall update that plan by December 31, 2015, and on or by December 31 every five years thereafter. These plans and EWMPs are to be submitted to the DWR.

Agricultural Water Measurement Regulation

Subdivision 10608.48(a) of SB X7-7 sets July 31, 2012 as the date by which agricultural water suppliers shall implement EWMPs that include measuring the volume of water delivered to customers.

Furthermore; Section 531.10(a) of the California Water Code (CWC), requires that:

(a) An agricultural water supplier shall submit an annual report to the department that summarizes aggregated farm-gate delivery data, on a monthly or bi-monthly basis, using best professional practices.

Agricultural water suppliers providing water to less than 10,000 irrigated acres, excluding acres that receive only recycled water, are not subject to the water measurement requirements. They remain subject to measurement requirements of Section 531 of the Water Code if they deliver more than 2000 acre feet of water or irrigate 2000 or more acres of land. The schedule of submittal of the farm-gate delivery is on an annual basis and are due starting July 30, 2013.

Agricultural water suppliers providing water to 10,000 or more irrigated acres but less than 25,000 irrigated acres, excluding acres that receive only recycled water, are not required to implement the water measurement requirements unless sufficient funding is provided specifically for that purpose.

Agricultural water suppliers providing water to 25,000 irrigated acres or more, excluding acres that receive only recycled water, shall measure water deliveries consistent with the water measurement requirements.

4.2.1.4 Schedule of Implementation

A phased implementation approach is recommended to allow the use of existing data to prepare initial estimates of the supplier level methods while data improvements are identified for implementation in subsequent phases.

Phase 1: Initial implementation, the first AWMP after legislative authority and source of funding are established

- Suppliers with existing data to make initial calculations of methods and include in their AWMPs. Some or most suppliers would have relatively good existing data on delivery records estimates of private groundwater pumping, agronomic uses, environmental uses and operational spill.
- DWR in cooperation with stakeholders identify any data improvements needed to implement the proposed methodology.
- DWR and cooperators set priorities for improvements. Priorities could be based on data components (e.g., agronomic uses and environmental uses) and based on statewide or basin water management considerations.
- DWR develops a plan to improve the key limiting data for Phase 2, based on expected costs or on a range of potential costs and available funds.
- Pending availability of funding, DWR develops programs and identifies or proposes sources of financial support for suppliers smaller than 25,000 acre to prepare AWMPs and quantify the methods.
- DWR develops data management program to collect, maintain, and disseminate the data.

Phase 2: Data improvements, the second AWMP after legislative authority and source of funding are established

- Suppliers implement the data improvement and apply the methods using the improved data. The suppliers report results in their AWMPs.
- DWR, cooperating entities and suppliers, and other experts assess results and revise data improvement recommendations if necessary.

Phase 3: Full Implementation, the third AWMP after legislative authority and source of funding are established

- All suppliers implement any data improvement from Phase 2, calculate supplier-level methods, and report to DWR in AWMPs.

Water suppliers report in AWMP the mean and standard deviation of field scale methods and distribution uniformity values in their service area.

4.2.2 Field Scale

4.2.2.1 Data Needed to Support the Methodology

The field scale methods use data collected from individual fields or categories of individual fields. Categories can be defined by basin, crop type, irrigation system, soil type, and other factors. Data needed at this scale are ETo, Kc, effective precipitation, water quality, agronomic water use, environmental use, and applied water. Timescale for computation of DU (see Section 5 - Indicators) at the field scale is per event and for CCUF, AWUF, and TWUF is average of the values per year (or growing season), determined based on annual values of the components of the equations (ETAW, AW, AU and EU).

Field scale methods and distribution uniformity indicator are recommended for implementation by water suppliers, government agencies, and other interested entities for participating growers.

4.2.2.2 Data Sources, Quality, and Limitations

Quantification of field-level water use efficiency must rely on grower-supplied data, data gathered during voluntary field-level studies, or new data gathered from field-level measurements such as through irrigation evaluations. Growers often measure and use information on applied water, crop water use, soil moisture, distribution uniformity, and return flow. They use these data to manage irrigation and production and to understand and control costs. They generally do not provide this information to others. There is a wide variation in the techniques used to measure or estimate field-level water use.

The availability and quality of field level water use data varies significantly. Some data are measured with a high degree of accuracy by some growers but with a lower accuracy by others. Some growers may calculate crop ET, and some may keep track of water applied for specific agronomic uses. Environmental uses of water that are incidental to crop irrigation activities would generally not be monitored or estimated by growers, whereas water applied specifically for environmental uses (such as winter field flooding for waterfowl) might be recorded.

DWR is working on a project with NASA that may be able to assist in calculating CCUF at the field scale via a model that is under development. This would provide estimated values of crop specific evapotranspiration that would be very useful for planning and management but would still require some undetermined amount of ground truthing by whoever uses the product.

Field-level water applications include water delivered to the field by the water supplier, groundwater pumped from private wells, and water reused from other fields (if it has not been delivered through the supplier's system). Many water suppliers maintain records of their water deliveries by field, but may not record the crop grown or the planting and harvest dates. Other water supplier's measure and record deliveries to turnouts (upstream of point of delivery to many fields) but not necessarily to individual fields. Growers view individual field records as proprietary business information, and suppliers do not release information by field, though some could provide aggregated data by crop. For most irrigated lands in California, private groundwater use on fields is recorded only by the growers. On-farm reuse of water would be recorded if done by the grower.

A Methodology for Quantifying the Efficiency of Agricultural Water Use

Table 4-2 provides a summary of data needed, likely sources of data for field methods, and identifies options, recommends an option and needed improvements.

Table 4-2 Field scale list of data needed, data sources, and options for quantifying the efficiency of ag water use

	Data needed	Source of data/options	Notes
Crop ET and ETAW	Crop area	Growers records	---
	Pe	Calculated from precipitation data from CIMIS or equivalent	---
	Kc	CIMIS or equivalent source	---
	ET	Calculated using CIMIS Eto and Kc or equivalent or processed satellite imagery	---
	ETAW	calculated (from Etc and Pe) based on field scale data, or processed satellite imagery	---
Applied Water (AW)	Surface deliveries	Water supplier records or field measurement during evaluation or measure water diversions	Water suppliers equal or greater than 2,000 acres are required by CWC 531.10 to measure water if locally cost effective and suppliers greater than 25,000 measure delivery CWC 10608.48(b)(1) and for suppliers more than 10,000 acres if funding is available
	Groundwater deliveries	Water supplier records	
	Private groundwater use	Private groundwater use data, estimates from power use, measurement, estimated by modeling	Groundwater use may be unmeasured
Agronomic use	Leaching requirement	Calculated from equations in this report or use best professional practices (BPP)	---
	Climate control	Use BPP	DWR may develop guidelines or methods in future
	Others	Seed bed preparation etc. Use BPP	---
Environmental Use	Water dedicated to environmental purposes (by regulation or permit)	Actual environmental water use required by regulation	May be required by permits or regulations
	Other	Studies or data collected from field evaluation, growers records,	DWR may develop guidelines or methods in future
Recoverable Flow	Surface drainage	Surface outflow measured	---
	Deep percolation (drainage)	Estimated by modeling or BPP	---

Acronyms: Pe – effective precipitation , CIMIS – California Irrigation Management Information System, Kc – crop coefficient, ET - evapotranspiration, ETo – reference evapotranspiration, Etc – crop evapotranspiration, ETAW – Evapotranspiration of Applied Water. BPP .

4.2.2.3 Data Collection and Reporting Responsibility

DWR recommends that the field scale methods be implemented through a co-operative and voluntary irrigation evaluation program of self-enrolled growers. For suppliers equal or greater than 25,000 acres, field scale evaluations and calculations would be done through the on-farm irrigation evaluation programs that water supplier provides to its customers (as required by CWC section 10608.48 (d), if it is locally cost effective).

- In an on-farm evaluation service provided on a voluntary basis to growers, the growers would be selected to provide a representative sample of fields by region, crop, irrigation system, and other appropriate factors. The data collected would be provided to the growers for making improvements in their water management practices. DWR has in the past funded irrigation system evaluation on a cost share arrangement with water suppliers. This can be a phased approach starting with supporting the existing irrigation system evaluations and potentially expanding to additional irrigation system evaluations (through mobile labs or similar venues) to provide a larger and more representative sample of fields. Protocols for confidentiality would be developed to ensure that information identifying individual fields, owners, or operators is not improperly disclosed. Collected data stripped of any personal or business information would be used by participating local and State agencies for improving local, regional, and statewide water management planning.
- Water suppliers and participating agencies develop summary of data including mean and standard deviation of field scale values of CCUF, AWUF, and TWUF and submit to DWR in AWMP.
- Existing National Resources Conservation Services (NRCS) and California Association of Resource Conservation Districts (CARCD) protocols for the irrigation system evaluation (mobile lab) activities be utilized.

For suppliers smaller than 25,000 acres, field scale evaluations would be done by water supplier or other cooperating entities if funding is available. DWR recommends:

- A cost share program in cooperation with interested entities. Potential entities may include the Agricultural Water Management Council, water suppliers, cooperating federal agencies, California Resource Conservation Districts, University of California Cooperative Extension, and other research institutions such as Cal Poly Training and Research Center or the Center for Irrigation Technology at California State University, Fresno or other entities to provide an irrigation and water use evaluation service, modeled on the irrigation system evaluation, to cooperating growers.

Mobile labs (teams of technicians with specialized equipment to perform irrigation evaluation) were established in California to perform activities such as DU and onsite irrigation system evaluation for efficiency. The evaluation takes one day to complete, covers an entire field evaluated, and includes standardized data collection and analysis. The primary field activities for evaluating DU and system efficiency are pressure measurements, flow rate measurements, and the determination of applied water.

4.2.2.4 Schedule of Implementation

DWR recommends that implementation of the field methods occur in phases. An initial assessment is needed that collects and assesses the existing data, and develops priorities for the collection of improved field data. Representative samples of fields would be selected based on the priorities, available resources, and growers' willingness to participate. Water suppliers implement methods 1, 2, and 3 based on existing data. The second phase would focus on new estimates, using detailed field evaluations that include estimates of irrigation system performance. Resources would be allocated according to the priorities developed in Phase 1. DWR would revise and improve upon data or procedures, if needed. The data improvement can be scaled to match resources available by adjusting the sample size of fields evaluated and by narrowing or broadening the number of priorities. Quantification methods could be applied and updated on a regular basis during this phase. DWR would refine the methods and protocols as needed. Phase 3 is full implementation.

Phase 1: Initial Quantification, the first AWMP after legislative authority and source of funding are established

- Water suppliers greater than or equal to 25,000 acres include in AWMP any on-farm evaluations and make initial calculation of field scale water use efficiency quantification methods based on the past practices. Develop a plan for providing on-farm irrigation evaluation, if locally cost effective.
- Water suppliers smaller than 25,000 acres include in AWMP any irrigation system evaluation evaluations and make initial calculation of field scale water use efficiency quantification methods based on the past practices if funding is made available.
- Based on review of AWMP, DWR in cooperation with stakeholders would identify data improvements or needed improvements in procedures to implement the methodology.
- DWR and cooperators identify important data needs develop procedures priorities for improvements. Priorities would be based on data components (e.g., field-level ET estimates versus water applied versus agronomic uses), crop categories, basins, irrigation methods, or other factors. Priorities would also be based on statewide or basin water management considerations.
- Water suppliers develop a plan to improve the key limiting data. Based on expected budget or on a range of potential budgets, develop a sampling plan to identify representative numbers of fields according to the priorities.

Phase 2: Data Improvements, the second AWMP after legislative authority and source of funding are established

- Water suppliers greater than 25,000 acres, if locally cost effective, provide field evaluations for implementation of field scale methods and implement the Phase 1 plans and report in AWMPs.
- Based on priorities and available funding, DWR and cooperating agencies implement the data improvement recommendations from Phase 1.
- Water suppliers calculate methods and update regularly as improved data is collected.
- Pending availability of funding, DWR develops programs and identify or propose sources of financial support for on-farm irrigation evaluation for suppliers smaller than 25,000 acre.

Phase 3: Full Implementation, the third AWMP after legislative authority and source of funding are established

- For water suppliers greater than 25, 000 acres implement if locally cost effective and for suppliers less than 25,000 acres implement if funding is available. As appropriate apply improved data collection and estimation processes and implement methods. An ongoing voluntary field sampling program would be part of this phase.

4.4 Reporting the Quantification of Efficiency of Agricultural Water Use

Data used and the results of the quantifying of the efficiency of agricultural water use would be reported as described in Table 4-3.

Table 4-3 Data elements, schedule, and responsible entity reports

Data element	Schedule	Responsible entity report
Statewide scale		
Summary of data reported in the AWMP to DWR.	California Water Plan updates after the legislative authority and sources of funding are established	California Water Plan updates
Supplier / basin alliance scale		
Basin alliance scale values of CCUF, AWUF, TWUF, and WMF. Supplier scale values of Etc, Pe, ETAW, Kc, AW, AU, EU, RF, WS, FGD, TWS, CCUF, AWUF, TWUF, WMF, (and indicator DF), mean and standard deviation of field scale CCUF, AWUF, TWUF, (and indicator DUs See section 5)	AWMPs, after legislative authority is established. AWMPs for suppliers less than 25,000 acres after the legislative authority and sources of funding are established	Agricultural Water Supplier's Agricultural Water Management Plan. Suppliers report field data in summarized form.

4.5 Data Management

DWR recommends that the results of the quantification of efficiency of agricultural water use when submitted to DWR be maintained by DWR and disseminated through the California Water Plan updates and other DWR planning and educational documents. CWC requires DWR to develop a standardized data reporting form water suppliers may use to submit water use data to agencies. DWR would maintain these data in a water use database that is being developed by DWR.

4.6 Estimated Implementation Costs

4.6.1 General Data and Improvement Costs

DWR would assist water suppliers by developing guidelines or making improvements in data and procedures for implementing the methodology, if needed. The approximate cost for DWR of developing guidelines and improvements in the methodology is estimated to be \$100,000 per year.

Data standards and the improvement plan would primarily be based on existing DWR and other established programs such as the Water Plan update data collection and water balance calculations, agricultural water measurement and diversion reporting, and water supplier field level water use evaluation activities

Data Reporting Costs

Although the cost estimate will be determined as if DWR were reporting and disseminating the information, other possible candidates could include UC Cooperative Extension, other universities and research institutions, private consultants, etc. Most associated costs will be dependent upon the activities and the responsible entity. The approximate cost of disseminating data is \$100,000 per year.

Data Management Costs

The development of a standardized water use reporting data base is essential to the successful outcome of online water use and water management plan submittal. DWR's capital outlay for this project would be approximately \$500,000 with annual operation and maintenance and data management costs of approximately \$200,000. DWR's spatial CIMIS project already provides reference evapotranspiration statewide and is in the process of developing a complementary map of crop coefficients, which when combined would provide crop specific evapotranspiration at a 2-kilometer resolution. Although the CIMIS capital outlay has already been established, it is anticipated that additional funds would be needed for annual operations and maintenance.

4.6.2 Water Supplier Scale Costs

Water suppliers would implement the four methods, CCUF, AWUF, TWUF, and WMF. To implement these methods annually the water supplier needs to quantify the annual values (as applicable) of the following parameters and perform the following (for details see Table 4-1 and Table 4-4, which appears at the end of this section):

1. Measure applied water to agricultural lands
2. Measure or estimate private groundwater used for irrigation in its service area
3. Measure tailwater resulting from irrigation in its service area
4. Collect crop information including crop area, length of crop season, root depth, crop Kc values, and crop ET
5. Estimate effective precipitation
6. Calculate ETAW
7. Calculate leaching and other climatic control water use in its service area
8. Calculate CCUF, AWUF, TWUF, and WMF.
9. Water suppliers of 25,000 acres or more of irrigated land are required to report components of the CCUF, AWUF, TWUF, and WMF in their AWMPs. Therefore, items 1 through 7 are already quantified per CWC (Table 4-1 describes the current requirements). Assuming that these water suppliers would already quantify the various parameters needed for computation of the four methods. The average annual cost of data collection associated with computation of CCUF, AWUF, TWUF, DF (Note DF is an Indicator - and farm gate delivery (FGD) and water supply (WS) are reported by these suppliers) and WMF for these suppliers is estimated to be \$1 - \$5 per acre. Upper range cost would be associated with those agencies that do not currently have data collection activities while the lower costs would be associated with the majority of agencies that have a data collection program.

Field scale values of CCUF, AWUF, DU (note DU is an Indicator and is discussed in Section 5), and TWUF would be statistically calculated over the entire supplier's service area based on the mean and standard deviation of available field scale calculated values, if supplier provides on-farm evaluation of irrigation systems (cost of field scale evaluations and data analysis are presented in Field Scale Costs section).

For suppliers serving more than 10,000 acres but less than 25,000 acres, additional measurement devices may be required to effectively calculate the four methods (Table 4-1 and 4-4). Existing legislation requires collection of some data if funding is available. About 67 water suppliers serve less than 25,000 acres but more than 10,000 acres, comprising a total 1.1 million acres (see Table 3-1). About twenty of these are Central Valley Project contractors that measure water delivery to their customers, so no new costs are expected for water measurement. CWC 531.10 requires water suppliers greater than 2,000 acres to measure delivery to customers if locally cost effective. Other suppliers may need to install

water measurement devices to measure deliveries and drainage flows. The initial cost of installing a device is estimated to be \$24 per acre and annual ongoing cost of \$8 per acre. Additionally, these suppliers need to calculate CCUF, AWUF, and TWUF and DF and WMF at the supplier scale. The annual cost of data collection associated with computation of CCUF, TWUF, DF, and WMF for these suppliers is estimated to be \$2-5 per acre/year. The suppliers are also calculating mean and standard deviation of field scale values. The costs are included in the Field Scale Costs (section 4.6.3).

The Costs of implementation of a Basin Alliance is not included because its costs will vary depending on the number of suppliers joining the basin-alliance and the characteristics of the individual water suppliers. However, the cost of the implementation is expected to be less than the sum of the costs of individual participating water suppliers.

4.6.3 Field Scale Costs

It is recommended that the field scale methods be conducted for participating growers. Water suppliers or other cooperating entities would implement three methods, CCUF, AWUF, and TWUF. To implement these methods annually the program needs to quantify the annual values (as applicable) of the following parameters and perform the following tasks (for details see Table 4-1 and Table 4-4):

1. Measure applied water to the field
2. Measure to estimate private groundwater used for irrigation
3. Measure tailwater resulting from irrigation (if applicable)
4. Collect crop information including crop area, length of crop season, root depth, crop Kc values, and crop ET
5. Estimate effective precipitation
6. Calculate ETAW
7. Calculate leaching and other climatic control water Use.
8. Calculate CCUF, AWUF, and TWUF.
9. For water suppliers that offer on-farm irrigation evaluation DU is also determined.

The field scale costs are estimated for a 25,000-acres water supplier. Assuming a field size of 330 acres, the total number of sites in the supplier area is 75.

Therefore, the cost descriptions of the above tasks are as follows:

1. Applied surface and groundwater water is measured and has no new cost (CWC 531.10)
2. Private groundwater (if applicable) may be measured at a cost of \$24/acre) or estimated using power usage data.
3. Measuring tailwater (if applicable) requires installation of water measurement device and data collection at a cost of \$2,500/site or about \$8/acre.
4. Items 4 through 9 above is estimated to cost about \$2 - \$5/acre/year

Table 4-4 Estimated cost of implementing the proposed methodology

Cost category	Data needed	Cost of supplier scale for: Suppliers equal or greater than 25,000 acres	Cost of supplier scale for: Suppliers more than 10,000 and less than 25,000 acres	Cost of field scale for suppliers (estimate is for a water supplier with 25,000 acres irrigated land)	DWR annual costs
Crop ET and ETAW	Crop Area	Required of water suppliers equal or greater than 25,000 acres, CWC 10826 (b)(7)(C)	\$2-5/acre/year	\$2-5/acre/year	Not Applicable (NA)
	Pe				
	Kc				
	Crop ET				
	ETAW				
Applied Water (AW)	Surface deliveries	Required of water suppliers equal or greater than 2,000 acres, CWC 531.10 and 10826(b)(7)(A).	Required of water suppliers equal or greater than 2,000 acres, CWC 531.10 and 10826(b)(7)(A).	Required of water suppliers equal or greater than 2,000 acres if locally cost effective CWC 531.10 and for equal or greater than 25,000 acres and for 10,000 to 25,000 if funding is available10608.48(b)(1)	NA
	Groundwater deliveries				
	Private groundwater use	Groundwater use may be unmeasured, has to be estimated. Included in Calculation of Efficiency Methods Costs	Included in ET and ETAW Costs	\$24*/acre	
Agronomic use (AU)	Leaching Requirement	Required of water suppliers equal or greater than 25,000 acres, CWC 10826 (b)	Included in Crop ET and ETAW Costs	Included in Crop ET and ETAW	NA
	Climate control				
	Others				

Table 4-4 (cont'd.) Estimated cost of implementing the proposed methodology

Cost category	Data needed	Cost of supplier scale for: Suppliers equal or greater than 25,000 acres	Cost of supplier scale for: Suppliers more than 10,000 and less than 25,000 acres	Cost of field scale for suppliers (estimate is for a water supplier with 25,000 acres irrigated land)	
Environmental Use (EU)	Water dedicated to the environmental purposes	Required of water suppliers equal or greater than 25,000 acres, CWC 10826 (b)	If required by regulation, it is already measured	Included in Crop ET and ETAW Costs	NA
	Other		Included in Recoverable Flow Costs	Included in Recoverable Flow Costs	
Recoverable Flow (RF)	Surface drainage	Required of water suppliers equal or greater than 25,000 acres, CWC 10826 (b) (6) and (7)(C)	\$24*/acre plus \$8/acre/year	\$8*/acre	NA
	Deep percolation (drainage)				
Calculation of Efficiency Methods	CCUF, AWUF, TWUF, WMF	\$1-5/acre/year	Included in Crop ET and ETAW Costs	Included in ET and ETAW Costs	NA
Data management	Data collection/Management/reporting			NA	\$300,000**
Improvements	Data/Procedure Improvements	NA	NA	NA	\$100,000
	Total (new costs)	\$1-5/acre/year	\$24/acre plus \$10- 13/acre/year	\$8-24/acre plus \$2- 5/acre/year	\$400,000

*- cost of water measurement device for recoverable flows and associated tasks.

** - additionally, DWR would have a one-time cost of \$500,000 for database development.

5 Supplemental Indicators

In addition to the four proposed methods for quantifying the efficiency of agricultural water use, DWR has included in this report four indicators that would provide supplemental information about irrigation system performance and crop productivity. These four indicators do not quantify the efficiency of agricultural water use. The purpose and application of these indicators are described in this section and summarized in Table 5-1.

Four indicators provide supplemental information on irrigation system performance and crop productivity. They do not quantify the efficiency of agricultural water use.

Table 5-1 Proposed implementing entities: Summary of supplemental indicators of irrigation system performance and crop productivity organized by spatial scale

		Spatial Scales			
		Statewide ⁽¹⁾	Supplier	County ⁽¹⁾	Field
Irrigation System Performance Indicators	Distribution uniformity (DU)⁽²⁾ Indicator evaluates the performance and effectiveness of an irrigation system. DU = Dawlq/Daw	—	--	--	(Voluntary) on-farm irrigation evaluation
	Delivery fraction (DF)⁽³⁾ Method evaluates the relationship between the water delivered to an area and the total applied surface or groundwater. DF = FGD/WS	--	Water Supplier	--	--
Productivity Indicators	Productivity of Applied Water (PAW) Indicator illustrates the relationship between crop production in tonnage and the volume of applied water. PAW = CY/AW	DWR	--	DWR*	Voluntary on-farm evaluation
	Value of Applied Water (VAW) Indicator illustrates the relationship between gross crop value in dollars and the volume of applied water. VAW = GCR/AW	DWR	--	DWR*	Voluntary on-farm evaluation

*- would require additional funding for DWR, approximately \$100,000 per year.

(1) Statewide and county scale calculations will be done based on data on annual time step and every five years and reported in the CA Water Plan Update. Cost of DU is included in the field scale methods.

(2) DU will be evaluated at the field scale and mean and standard deviation of the field values of DU will be calculated by the supplier for their service area.

(3) FGD: total farm gate deliveries; WS: surface and groundwater supplier delivered or diverted into the water supplier Distribution System

Acronyms: AWc- applied water at county scale, Daw: the average depth of applied water across the field; Dawlq: the average lower quarter depth of applied water; DF: delivery fraction; GCR: Gross crop revenue; PAW: productivity of applied water; VAW: value of applied water; CY: Weight of crop production.

5.1 Irrigation System Performance Indicators

Two indicators provide information on the performance of irrigation systems: distribution uniformity (DU) and delivery fraction (DF).

Distribution Uniformity (DU). This is a measure of irrigation system performance - how evenly water is applied and infiltrates into the soil across a field during an irrigation event. A well designed irrigation system applies water to crops as uniformly as possible to optimize crop production. DU is not a measure of how efficiently water is used on the field. An irrigation event can have high DU but low efficiency due to excessive runoff or deep percolation. DU is expressed as a percentage between 0 and 100 and is typically derived from “catch can” or measurement of depth of wetted soil. It is applicable at the field scale; however, the mean and standard deviation of field scale DU values can be used to assess irrigation performance at the water supplier scale or basin scale. DU is already required for suppliers greater than 25,000 acres if supplier provides on-farm irrigation evaluation.

DU is a measure of irrigation system performance in evenly distributing water to a field. An irrigation event can have high distribution uniformity (DU) but low efficiency due to excessive runoff or deep percolation.

DU is calculated with the equation

$$\text{Equation 5} \\ \text{DU} = \text{Dawlq} / \text{Daw}$$

where;

- **Dawlq** is lower the quarter values of depth or applied water or infiltrated water and
- **Daw** is average depth of applied water to the field or infiltrated into soil.

Delivery Fraction (DF) - This fraction evaluates the efficiency of the water supplier’s water delivery system for delivering water to its customers. It is also known as conveyance efficiency. It allows the evaluation of the relationship between the water delivered to agriculture fields in a supplier service area and the total water brought into the boundary of the water supplier distribution system (plus distribution system return flows minus water used for non-agricultural crop uses). It is recommended for the water supplier scale only. Since water suppliers are reporting farm-gate deliveries and also are required to quantify their water supplies (see Table 4-1) calculation of DF is assumed to be done by suppliers.

DF is calculated with the equation

$$\text{Equation 6}$$
$$DF = [FGD]/[WS]$$

where;

- **Farm-gate delivery (FGD)** is the aggregated farm-gate delivery by the water supplier to its customers - total deliveries to individual customers. If water supplier returns the farm tailwater to its system, the return flows are measured as part of FGD.
- **Water supply (WS)** is the volume of surface water and groundwater, whether public or private, that enters the supplier's distribution system for delivery by the water supplier, including the distribution system return flows to its customers, and excluding water deliveries into the distribution system for non-agricultural crops and non-environmental uses (M&I). WS is calculated from diversion records and the quantity of supplier and privately pumped surface water or groundwater (measured or estimated from groundwater modeling) into the supplier's distribution system, less the amount of water entered into portions of the distribution system serving non-agricultural uses.
- The water supplier's distribution system consists of transmission systems that convey water to local storage reservoirs and the distribution systems that supply water to agricultural customers and urban customers. Water distribution systems are generally comprised of large networks of canals and pipes with branched and loop topologies with flow paths to many delivery points. In some systems, some customers receive water for municipal and industrial (M&I) uses directly from transmission canals and pipes; therefore, the water supplier may exclude from its agricultural delivery system the sections of the transmission canals and pipes delivering water to the retail M&I customers. Distribution system boundaries should be defined by points of metering or measurement of the water supply. Typical measurement locations for distribution include diversion from streams and discharge points from storage reservoirs, wells feeding directly into the distribution system, recycled water, and imported water entering directly into the distribution system. Actual distribution systems may vary greatly in configuration. Therefore, each water supplier must define and delineate its distribution system for purposes of calculating Water Supply and Total Water Supply.
- **Total water supply (TWS)** is the total volume of surface water and groundwater, whether public or private that enters the field, supplier, or basin boundary. Note that TWS includes all water supplies within a

A water supplier can evaluate its distribution system improvements by calculating DF using its total farm-gate deliveries and its water supply. Under CWC §531.10, many water suppliers are required to determine the components used to calculate DF.

boundary whereas WS only includes water supplies that enter supplier's distribution system for delivery to agricultural customers.

5.2 Crop Productivity Indicators

During ASC and subcommittee meetings, two indicators relating crop productivity to applied water were identified and discussed. DWR has reported statewide trends for these indicators in the 2009 update of the California Water Plan. The two crop productivity indicators provide information about the relationship and trends of crop yield and/or monetary value to the volume of irrigation water applied during production. They can indicate long-term changes or trends in agricultural production and income relative to irrigation at larger spatial scales. However, these indicators do not quantify the efficiency of agricultural water use nor economic efficiency (see Box 5-1 Economic Efficiency).

Crop production depends on many factors other than the water to meet crop consumptive and non-consumptive needs (applied water), including water quality, climate, soil type, soil depth, crop parameters (variety), crop management (fertilizer and pest management, etc.) and water management (irrigation system, irrigation management, and water supply flexibility and reliability).

DWR cautions that the crop productivity indicators described in this section not be used to draw conclusions about basin crop selection because many factors other than applied water can affect crop selection, crop production and income in any given year and location and with changing crop markets. The purpose and limitations of these crop productivity indicators are described in this section and summarized in Table 5-1.

Indicators have been used to show broad comparisons between regions but these indicators should not be used to conclude which crop or region uses water in a more economically efficient way.

Box 5-1 Economic Efficiency

Economic efficiency of water use in agricultural production has several important differences from traditional physical measures of efficiency. Economic efficiency is not a single measure, but rather is a set of conditions relating input use and output¹. Most of these conditions derive from assumptions of profit maximization, constrained profit maximization, or cost minimization. All conditions must be met for production to be called economically efficient. Economic efficiency is not an index measured on a scale such as 0 to 100 percent. Economic indicators could be, and occasionally have been developed to show broad comparisons between regions or crops or over time for a given region or crop. These indicators should not be used to draw firm conclusions about which crops or regions are using water in more economically efficient ways.

Economic efficiency conditions rely on marginal responses and rates of trade-off. Generally, these are not directly observable using aggregate data or even producer-level or field-level data. Rather, they must be estimated using statistical procedures or simulated using a model of agricultural production. For example, statistical methods can be used to infer marginal values and rates of trade-off among inputs and outputs. Results of such analysis could indicate whether a particular agricultural water use appears to meet conditions of economic efficiency from a local or broader perspective. Also, the economic effects of *changes* in water use, such as from distribution system improvements, can be quantified using standard approaches like benefit-cost analysis or cost-effectiveness analysis.

Economic efficiency is not a single, quantifiable value that is measurable on an absolute or relative scale. There are economic indicators that relate to economic efficiency and that combined with other benefits provided by agriculture could be used to help guide public policy and public investment, but with an understanding of their limitations. Importantly, crop productivity indicators described in this section do not quantify the economic efficiency of agricultural water use.

¹A detailed description of these conditions is beyond the scope of this paper, but can be found in any advanced microeconomics textbook. Briefly, the conditions show the relationships between rates of change and substitution between inputs and outputs that would hold if commodities are being produced in an economically efficient manner.

Two indicators provide information on crop productivity—Productivity of Applied Water (PAW) and Value of Applied Water (VAW).

Productivity of Applied Water (PAW). This indicator illustrates the relationship (ratio) between crop production in tonnage and the volume of applied water. It is most applicable at the statewide and county scales.

PAW is calculated with the equation

$$\text{Equation 7} \\ \text{PAW} = \text{Crop Yield} / \text{AW}$$

where;

- **Crop yield (CY)** would include the total production by weight or other recognized measure of yield for a crop
- **AW** is the total applied water used for agricultural crop production within the area.

This indicator must be calculated separately for each crop to avoid adding together disparate physical units of different crops. As a result, the total applied water also needs to be quantified separately by crop. Some, but not all, suppliers maintain records of crop-specific deliveries to fields. Few irrigated areas in California maintain any standard record of groundwater use on a crop-specific basis. Therefore, in most cases, estimates would have to rely on growers' field records. Suppliers' delivery records could be used if they could be matched to a particular crop and if the supplier or analyst were confident that no private pumping or other water sources were used to irrigate the crop. In the absence of these detailed data, county level production from agriculture commissioner's report and applied water calculated at county and statewide scales by DWR for the CWP update may be used to compute this productivity indicator. Calculation of applied water at the county level requires interpolation from detailed analysis units (DAUs) or other appropriate scales.

Value of Applied Water (VAW). This indicator illustrates the relationship (ratio) between gross crop revenue (value) in dollars and the volume of applied water. It is most applicable at the statewide and county scales.

VAW is calculated with the equation

$$\text{Equation 8} \\ \text{VAW} = \text{Gross Crop Revenue} / \text{AW}$$

The detailed analysis unit (DAU) is the smallest planning and analysis boundary for the California Water Plan. A number of DAUs form a planning area, which is the next larger analysis boundary. A number of planning areas in turn form a hydrologic region, and there are 10 hydrologic regions covering the entire state. See Appendix B for maps of California's county boundaries and 10 hydrologic regions and the DAUs and county boundaries within the Colorado River Hydrologic Region as an example. For example, when water suppliers' data (i.e. applied water) is used for planning purposes in DAUs, data may have to be interpolated due to mismatch in boundaries of DAUs and water suppliers

The ratios described here are indicators that relate to, but are not the same as, the economic efficiency of agricultural water use.

where;

- **Gross crop revenue (GCR)** includes the total gross crop value or revenue of irrigated agricultural (price multiplied by yield). The inflation-adjusted dollars of gross agricultural revenue per acre-foot of applied water is used to determine production value.
- **AW** is the total applied water surface water and groundwater pumping for irrigated agriculture within a county or statewide as computed by DWR for the CWP update. An analysis presented in Volume 4 of California Water Plan Update 2009 used this indicator to illustrate the increasing economic productivity of California agricultural water use at a statewide scale.

The VAW can increase by reducing applied water or higher crop yield/unit of water and higher prices for the crop. Because agricultural crop production is done through field survey of crops and reported by the county agricultural commissioner, DWR recommends reporting crop productivity and value of production for statewide and county scales. Application of the PAW and VAW at the field scale is difficult and limited by the lack of needed data and mechanisms of obtaining the data needed to calculate these fractions. In addition, field scale data are considered proprietary. Applied water at the field scale may be available from supplier records as long as the groundwater used is also measured by the supplier or is available from the grower. But the crop production and value of crop is only available from the growers. Therefore, the field scale PAW and VAW indicators are included in the report for consistent use by growers and are considered voluntary for field scale.

Table 5-2 shows what components of indicators are calculated and which ones are empirical.

Crop productivity indicator:

VAW – Value of Applied Water

VAW = Crop Value/AW

An analysis presented in Volume 4 of California Water Plan Update 2009 used this indicator to illustrate the increasing economic productivity of California agricultural water use at a statewide scale.

Table 5-2 Empirical and modeled components of indicators

Indicator	Equation	Empirical (observed)	Modeled
PAW-statewide	Crop yield/AW		Crop yield, AW
VAW-statewide	Gross Crop Revenue /AW		Gross Crop Revenue, AW
PAW- county	Crop yield/AW		Crop yield, AW
VAW-county	Gross Crop Revenue /AW		Gross Crop Revenue
DF-supplier	FGD/WS	FGD, WS	
DU-field	Dawlq/Daw	Dawlq, Daw	
PAW-field	Crop yield/AW	Crop yield, AW	
VAW-field	Gross Crop Revenue /AW	Gross Crop Revenue, AW	

References

- Allen RG, Tasumi M, and Trezza R. 2007a. "Satellite-based energy balance for mapping evapotranspiration with internalized calibration _METRIC_ - Model." *J. Irrig. Drain. Eng.*, 133_4_, 380–394.
- Allen RG, et al. _2007b_. "Satellite-based energy balance for mapping evapotranspiration with internalized calibration _METRIC_ – Applications." *J. Irrig. Drain. Eng.*, 133_4_, 395–406.
- American Society of Civil Engineers. Environmental and Water Resources Institute (US). Task Committee on Standardization of Reference Evapotranspiration. 2005. The ASCE standardized reference evapotranspiration equation. Allen RG, Walter IA, et al., editors. Reston, Va: American Society of Civil Engineers.
- Bastiaanssen WGM, et al. _1998b_. "Remote sensing surface energy balance algorithm for land _SEBAL_: 2. Validation." *J. Hydrol.*, 212–213_1–4_, 213–229.
- Bastiaanssen WGM. _2000_. "SEBAL based sensible and latent heat fluxes in the irrigated Gedez Basin, Turkey." *J. Hydrol.*, 229_1–2_, 87–100.
- California Department of Water Resources (DWR). 2011. Cost Analysis for Proposed Agricultural Water Measurement Regulation in Support of Economic and Fiscal Impact Statement. April 2011.
<http://www.water.ca.gov/wateruseefficiency/sb7/committees/ag/a2/>
- California Department of Water Resources (DWR). 2009. California Water Plan Update 2009. Sacramento, California.
- Devine, Anisa (personal communication) Imperial Irrigation District, 2011.
- Gonzalez-Dugo M., C. Neale, L. Mateos, W. Kustas, J. Prueger, M. Anderson, and F. Li., 2009. A comparison of operational remote sensing-based models for estimating crop evapotranspiration. *Agric. Forest Meteor.* 149:1843-1853.
- Heermann DF and Solomon KH. 2007. Efficiency and uniformity. In: Design and operation of farm irrigation systems. 2nd edition. St. Joseph, MI: ASABE.
- Temesgen B, Eching SO, Davidoff B, and Frame K. 2005. Comparison of Some ETo Equations for California. *J. Irrig. Drain. Eng.*
- Letey, J., G.J. Hoffman, J.W. Hopmans, S.R. Grattan, D, Suarez, D.L. Corwin, J.D. Oster, L. Wu, AND C. Amrhein. 2011. Evaluation soil salinity leaching requirement guidelines. *Agricultural Water Management*, (98)502-506.
- Rhoades, J.D. 1974. Drainage for salinity control. *Agricultural Drainage*, Van Schilfgaarde, J. (Ed). *Agronomy Monograph*, (17)433-461.
- Ayers R.S. and Westcot D.W. 1994 Water quality for agriculture. FAO Irrigation and Drainage Paper 29 Rev.1, FAO, Rome.

Appendix A. Selected Sections of California Water Code

Sections of the CWC enacted by the SB X7-7:

§10608. The Legislature finds and declares all of the following:

(a) Water is a public resource that the California Constitution protects against waste and unreasonable use.

(b) Growing population, climate change, and the need to protect and grow California's economy while protecting and restoring our fish and wildlife habitats make it essential that the state manage its water resources as efficiently as possible.

(c) Diverse regional water supply portfolios will increase water supply reliability and reduce dependence on the Delta.

(d) Reduced water use through conservation provides significant energy and environmental benefits, and can help protect water quality, improve streamflows, and reduce greenhouse gas emissions.

(e) The success of state and local water conservation programs to increase efficiency of water use is best determined on the basis of measurable outcomes related to water use or efficiency.

(f) Improvements in technology and management practices offer the potential for increasing water efficiency in California over time, providing an essential water management tool to meet the need for water for urban, agricultural, and environmental uses.

§10608.4. It is the intent of the Legislature, by the enactment of this part, to do all of the following:

(a) Require all water suppliers to increase the efficiency of use of this essential resource.

(e) Establish consistent water use efficiency planning and implementation standards for urban water suppliers and agricultural water suppliers.

(i) Require implementation of specified efficient water management practices for agricultural water suppliers.

(j) Support the economic productivity of California's agricultural, commercial, and industrial sectors.

(k) Advance regional water resources management.

§10608.8.

(c) This part does not require a reduction in the total water used in the agricultural or urban sectors, because other factors, including, but not limited to, changes in agricultural economics or population growth may have greater effects on water use. This part does not limit the economic productivity of California's agricultural, commercial, or industrial sectors.

§10608.12 (a) "Agricultural water supplier" means a water supplier, either publicly or privately owned, providing water to 10,000 or more irrigated acres, excluding recycled water. "Agricultural water supplier" includes a supplier or contractor for water, regardless of the basis of right, that distributes or sells water for ultimate resale to customers. "Agricultural water supplier" does not include DWR.

§10608.64. The department, in consultation with the Agricultural Water Management Council, academic experts, and other stakeholders, shall develop a methodology for quantifying the efficiency of agricultural water use. Alternatives to be assessed shall include, but not be limited to, determination of efficiency levels based on crop type or irrigation system distribution uniformity. On or before December 31, 2011, the department shall report to the Legislature on a proposed methodology and a plan for implementation. The plan shall include the estimated implementation costs and the types of data needed to support the methodology. Nothing in this section authorizes the department to implement a methodology established pursuant to this section.

§10800

(e) There is a great amount of reuse of delivered water, both inside and outside the water service areas.

(f) Significant noncrop beneficial uses are associated with agricultural water use, including streamflows and wildlife habitat.

(h) Changes in water management practices should be carefully planned and implemented to minimize adverse effects on other beneficial uses currently being served.

Sections of the California Water Code enacted by AB 1404

531.10. (a) An agricultural water supplier shall submit an annual report to the department that summarizes aggregated farm-gate delivery data, on a monthly or bimonthly basis, using best professional practices.

(b) Nothing in this article shall be construed to require the implementation of water measurement programs or practices that are not locally cost effective.

531. Unless the context otherwise requires, the definitions set forth in this section govern the construction of this article.

(a) "Aggregated farm-gate delivery data" means information reflecting the total volume of water an agricultural water supplier provides to its customers and is calculated by totaling its deliveries to individual customers.

(b) "Agricultural water supplier" means a supplier either publicly or privately owned, supplying 2,000 acre-feet or more of surface water annually for agricultural purposes or serving 2,000 or more acres of agricultural land.

An agricultural water supplier includes a supplier or contractor for water, regardless of the basis of right, which distributes or sells water for ultimate resale to customers.

Agricultural water management planning and implementation enacted by SB X7-7

10820. (a) An agricultural water supplier shall prepare and adopt an agricultural water management plan in the manner set forth in this chapter on or before December 31, 2012, and shall update that plan on December 31, 2015, and on or before December 31 every five years thereafter.

(b) Every supplier that becomes an agricultural water supplier after December 31, 2012, shall prepare and adopt an agricultural water management plan within one year after the date it has become an agricultural water supplier.

10826. An agricultural water management plan shall be adopted in accordance with this chapter. The plan shall do all of the following:

(a) Describe the agricultural water supplier and the service area, including all of the following:

(1) Size of the service area.

(2) Location of the service area and its water management facilities.

(3) Terrain and soils.

(4) Climate.

(5) Operating rules and regulations.

(6) Water delivery measurements or calculations.

(7) Water rate schedules and billing.

(8) Water shortage allocation policies.

(b) Describe the quantity and quality of water resources of the agricultural water supplier, including all of the following:

(1) Surface water supply.

(2) Groundwater supply.

(3) Other water supplies.

(4) Source water quality monitoring practices.

(5) Water uses within the agricultural water supplier's service area, including all of the following:

(A) Agricultural.

(B) Environmental.

(C) Recreational.

(D) Municipal and industrial.

(E) Groundwater recharge.

(F) Transfers and exchanges.

(G) Other water uses.

(6) Drainage from the water supplier's service area.

(7) Water accounting, including all of the following:

(A) Quantifying the water supplier's water supplies.

(B) Tabulating water uses.

(C) Overall water budget.

(8) Water supply reliability.

(c) Include an analysis, based on available information, of the effect of climate change on future water supplies.

(d) Describe previous water management activities.

(e) Include in the plan the water use efficiency information required pursuant to Section 10608.48.

10608.48. (a) On or before July 31, 2012, an agricultural water supplier shall implement efficient water management practices pursuant to subdivisions (b) and (c).

(b) Agricultural water suppliers shall implement all of the following critical efficient management practices:

(1) Measure the volume of water delivered to customers with sufficient accuracy to comply with subdivision (a) of Section 531.10 and to implement paragraph (2).

(2) Adopt a pricing structure for water customers based at least in part on quantity delivered.

(c) Agricultural water suppliers shall implement additional efficient management practices, including, but not limited to, practices to accomplish all of the following, if the measures are locally cost effective and technically feasible:

(1) Facilitate alternative land use for lands with exceptionally high water duties or whose irrigation contributes to significant problems, including drainage.

(2) Facilitate use of available recycled water that otherwise would not be used beneficially, meets all health and safety criteria, and does not harm crops or soils.

(3) Facilitate the financing of capital improvements for on-farm irrigation systems.

(4) Implement an incentive pricing structure that promotes one or more of the following goals:

(A) More efficient water use at the farm level.

(B) Conjunctive use of groundwater.

(C) Appropriate increase of groundwater recharge.

(D) Reduction in problem drainage.

(E) Improved management of environmental resources.

(F) Effective management of all water sources throughout the year by adjusting seasonal pricing structures based on current conditions.

(5) Expand line or pipe distribution systems, and construct regulatory reservoirs to increase distribution system flexibility and capacity, decrease maintenance, and reduce seepage.

(6) Increase flexibility in water ordering by, and delivery to, water customers within operational limits.

(7) Construct and operate supplier spill and tailwater recovery systems.

(8) Increase planned conjunctive use of surface water and groundwater within the supplier service area.

(9) Automate canal control structures.

(10) Facilitate or promote customer pump testing and evaluation.

(11) Designate a water conservation coordinator who will develop and implement the water management plan and prepare progress reports.

(12) Provide for the availability of water management services to water users. These services may include, but are not limited to, all of the following:

(A) On-farm irrigation and drainage system evaluations.

(B) Normal year and real-time irrigation scheduling and crop evapotranspiration information.

(C) Surface water, groundwater, and drainage water quantity and quality data.

(D) Agricultural water management educational programs and materials for farmers, staff, and the public.

(13) Evaluate the policies of agencies that provide the supplier with water to identify the potential for institutional changes to allow more flexible water deliveries and storage.

(14) Evaluate and improve the efficiencies of the supplier's pumps.

(d) Agricultural water suppliers shall include in the agricultural water management plans required pursuant to Part 2.8 (commencing with Section 10800) a report on which efficient water management practices have been implemented and are planned to be implemented, an estimate of the water use efficiency improvements that have occurred since the last report, and an estimate of the water use efficiency improvements estimated to occur five and 10 years in the future. If an agricultural water supplier determines that an efficient water management practice is not locally cost effective or technically feasible

10608.48

(d) Agricultural water suppliers shall include in the agricultural water management plans required pursuant to Part 2.8 (commencing with Section 10800) a report on which efficient water management practices have been implemented and are planned to be implemented, an estimate of the water use efficiency improvements that have occurred since the last report, and an estimate of the water use efficiency improvements estimated to occur five and 10 years in the future. If an agricultural water supplier determines that an efficient water management practice is not locally cost effective or technically feasible, the supplier shall submit information documenting that determination.

(e) The data shall be reported using a standardized form developed pursuant to Section 10608.52.

(f) An agricultural water supplier may meet the requirements of subdivisions (d) and (e) by submitting to the department a water conservation plan submitted to the United States Bureau of Reclamation that meets the requirements described in Section 10828.

(h) The department may update the efficient water management practices required pursuant to subdivision (c), in consultation with the Agricultural Water Management Council, the United States Bureau of Reclamation, and the board. All efficient water management practices for agricultural water use pursuant to this chapter shall be adopted or revised by the department only after the department conducts public hearings to allow participation of the diverse geographical areas and interests of the state.

This page left blank for two-sided printing

Appendix B. Maps

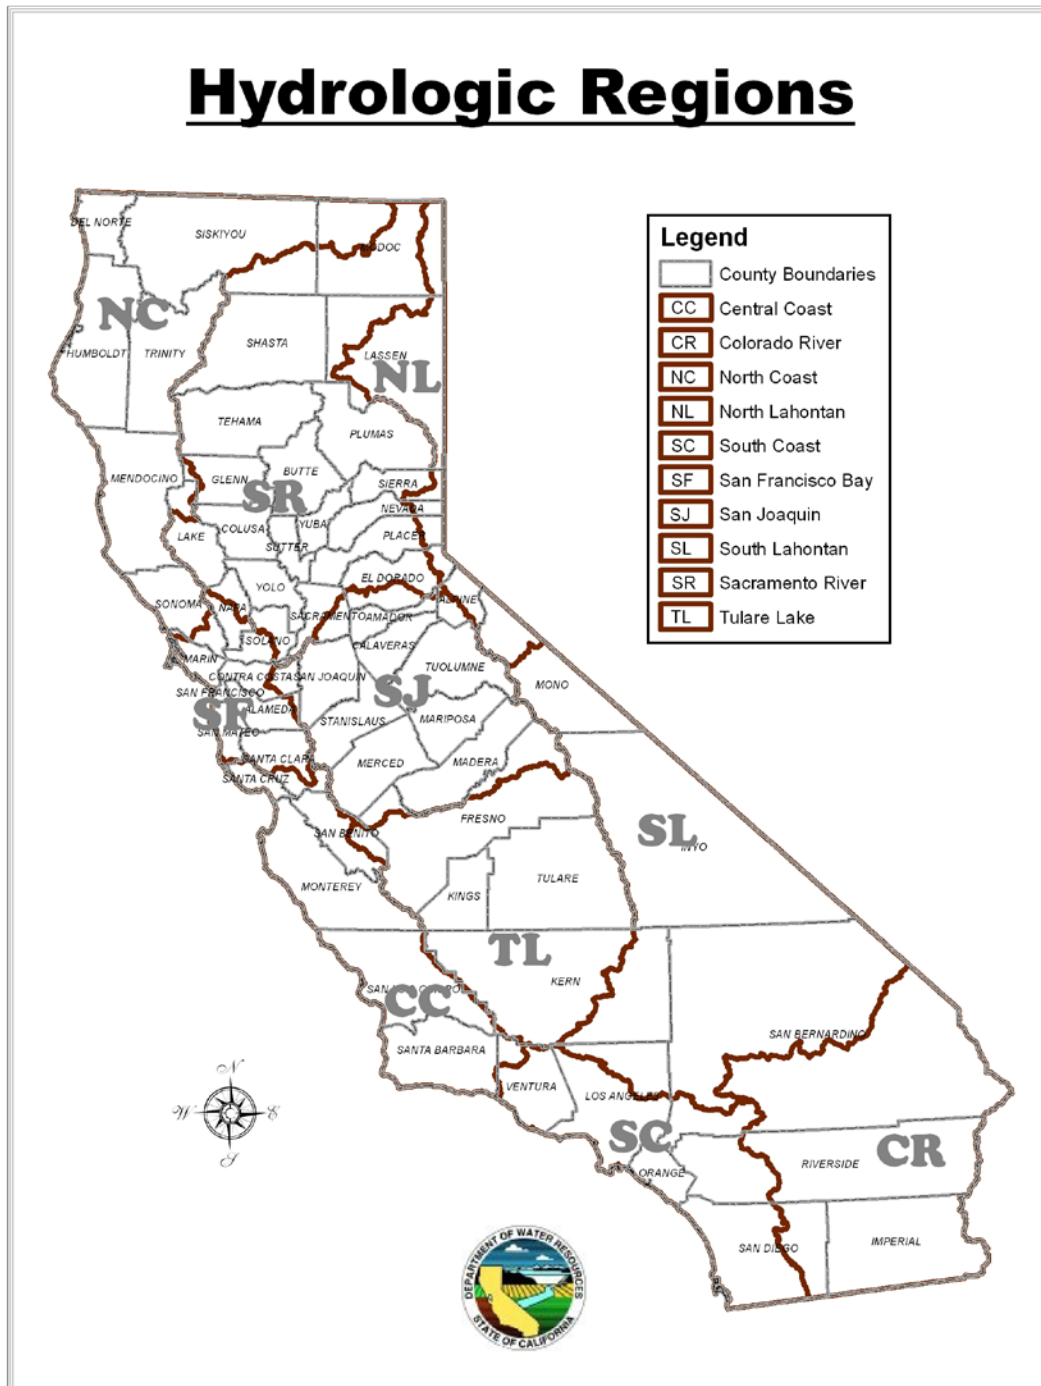


Figure B-1 DWR hydrologic regions including county boundaries

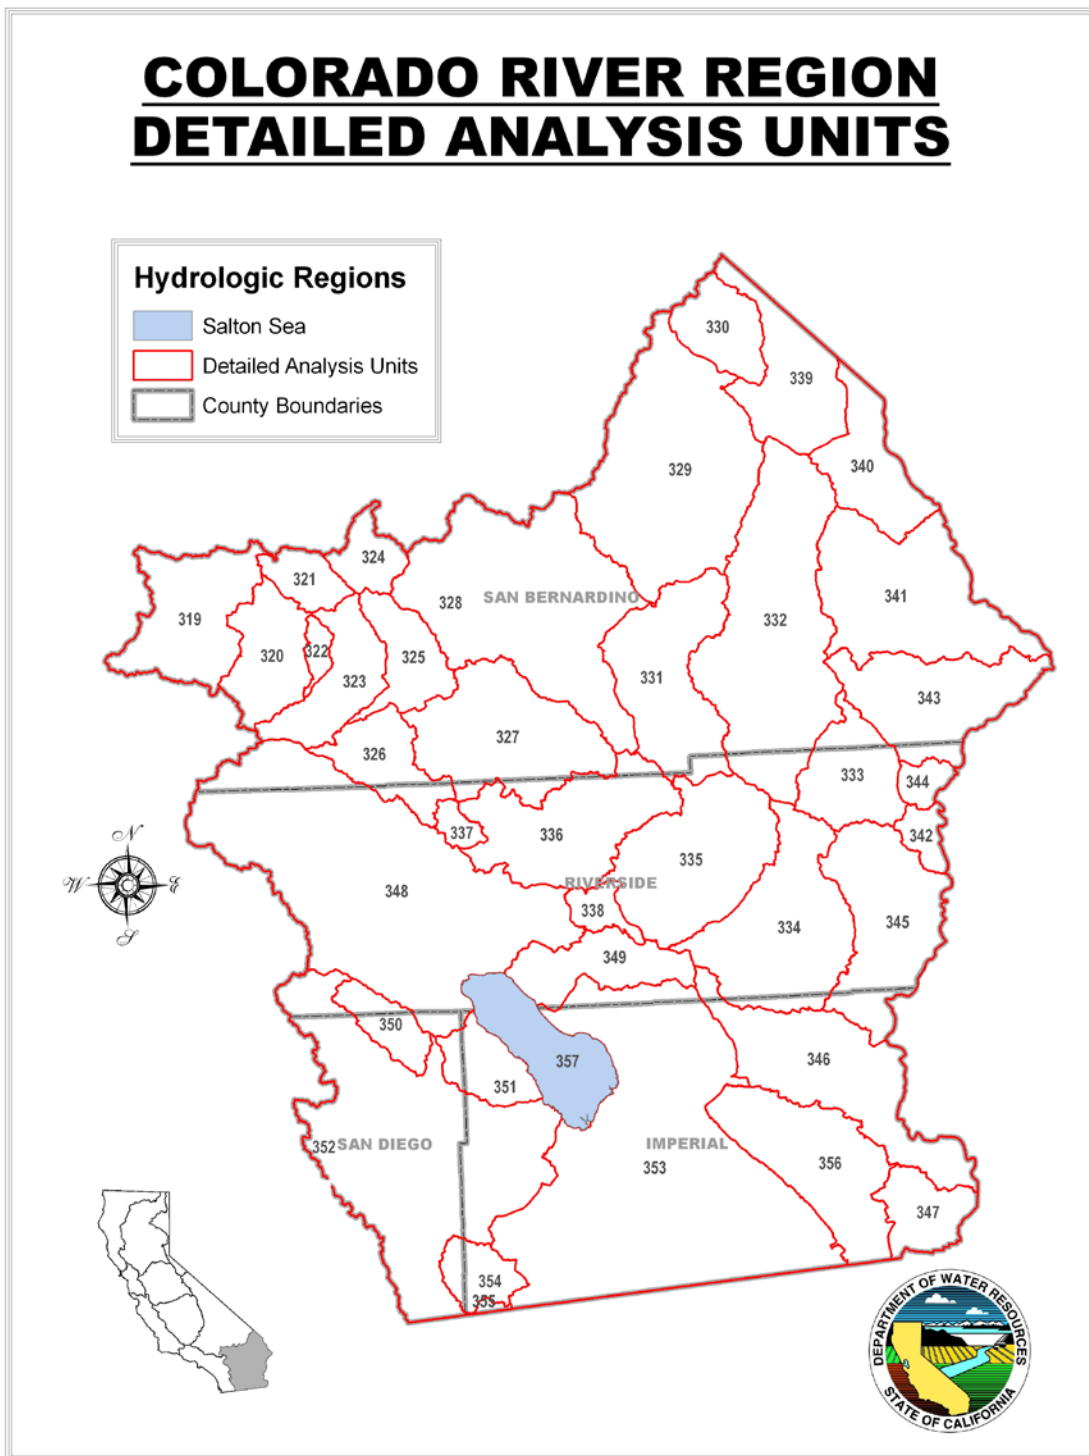


Figure B-2 DWR detailed analysis units for the Colorado River Hydrologic Region and respective counties

Appendix C. Calculation Examples of Water Use Efficiency Quantification Methods and Indicators

C.1 Calculation Examples of Quantifying the Efficiency of Agricultural Water Use and Irrigation System Performance Indicators

None of the assumed quantities or percentages used in the examples necessarily represents acceptable default value.

C.1.1 Water Supplier Scale Calculation Example 1

Water supplier is 45,000 acres and additional details are in Table C-1 and in this example, each method is calculated at the supplier scale in Table C-1.

Table C-1 Water supplier scale water use efficiency quantification methods and Indicators, example 1

(see also Table C-3 for additional applicable details)

Quantifying the Efficiency of Agricultural Water Use and irrigation System Performance		
Elements	Explanations	Calculations
ETAW	<p>Evapotranspiration of applied water (ETAW) can be calculated as the seasonal total crop evapotranspiration (ET) minus the cumulative effective rainfall contribution (Pe), estimated assuming that 25 percent of total precipitation from January to the end of irrigation season contributes to ETc. Therefore, the total ETAW can be expressed as $ETAW = (ET - Pe) \times \text{crop acreage}$.</p> <p>In-season weighted mean crop coefficient curves (Kc) for a crop is used with the cumulative reference evapotranspiration (ETo) to determine total seasonal crop evapotranspiration, ET.</p> <p>A sample calculation of a seasonal crop water balance for a tomato crop grown at Davis, California is shown below. A weighted mean Kc value of 0.82 for the periods of planting to harvest was used to represent tomato. For simplification, the values of Kc for the different periods within the growing season are represented as straight lines. The cumulative ETo value obtained from the CIMIS station at Davis for the cropping season is 2.92 ft.</p> <p>$ET = ETo \times \text{Weighted mean Kc} = 2.92 \times 0.82 = 2.40 \text{ ft}$</p> <p>$Pe = \text{Total Precipitation} \times 20\% = 1.15 \times 20\% = 0.23 \text{ ft}$</p> <p>Crop acreage = 45,000 acre</p> <p>Substituting these values in the proposed equation yields</p> <p>$ETAW = (ET - Pe) = (2.2 - .23) = 2.2$</p> <p>$ETAW = (2.2) \times 45,000 = 99,000 \text{ AF per year}$</p> <p>Note- ETAW calculated above was compared with predictions of ETAW with the CUP plus application program "Consumptive Use Program Plus" or "daily soil water balance program" developed to estimate daily soil water balance to determine ETc and ETAW for agricultural crops and other surfaces that account for ET losses and water contributions of rainfall and irrigation water (see Appendix D). The calculations require input of weather or climate data, soil depth and water-holding capacity, crop root depth, and seasonal crop coefficient curves. Estimates of ETAW compared well with CUP plus; for example, the total ET estimates for tomato at Davis for 2010 were 2.40 ft and 2.5 of ET and Pe of 0.23 ft and 0.16 ft for this method and CUP plus respectively, a difference in ETAW value of roughly 6%.</p>	<p>$ETAW = 2.2 \times 45,000 = 99,000 \text{ AF per year}$</p>
Agronomic	<p>Seasonal evapotranspiration of a tomato crop (ET) grown in Yolo County in 2010 is 2.4 ft. Electrical conductivity (ECi) of irrigation water is 1.0 ds/m. LR is calculated as:</p> $LR = \frac{EC_i}{5(EC_e) - EC_i}$ <p>The ECe from Table D-1 for tomato at a 100 percent yield potential is 2.5 ds/m, therefore:</p> $LR = \frac{1.1}{5(2.5) - 1.1} = 0.10$ <p>Agronomic Use (AU) can be estimates as:</p>	<p>$AU = (0.10 \times 2.2 \times 45,000) = 9,900 \text{ AF per year}$</p>

A Methodology for Quantifying the Efficiency of Agricultural Water Use

	<p>$AU = (LR \times ETAW \times \text{crop acreage})$ Substituting these values in the above equation yields The AU is the amount of applied irrigation water needed to meet leaching requirement of a tomato crop grown in Yolo County in 2010.</p>	
Environmental	<p>Garter snake habitat maintained on canal banks; plants assumed to have $ET = 4 \text{ AF/A}$ (Sudan grass). Approximately 50 acres of habitat. Water use $= ET \times \text{Area}$</p>	Canal habitat: $EU = 4 \times 50 = 200 \text{ AF per year}$
	<p>Several fields are flooded in fall/winter to provide habitat for migratory birds. Approx 6-inches per acre of net water for 8,000 acres in supplier's boundary are used. Water use $= ET \times \text{Area}$</p>	Field habitat $= (6/12) \times 8,000 = 4,000 \text{ AF per year}$
	<p>Supplier is required to maintain 6 cubic feet per second (cfs) flows in drain from June 1 through October 30 for habitat. Water use $= (\text{flow}) \times (\text{Duration}) = (6 \text{ cfs}) \times (3600 \times 24 \text{ sec/day}) / (43,560 \text{ af/cf}) \times (150 \text{ day}) = 1,800 \text{ AF}$</p>	<p>Drain flows $= 1,800 \text{ AF per year}$ Total $EU = 200 + 4,000 + 1,800 = 6,000 \text{ af per year}$</p>
Aggregate Farm-gate Deliveries	<p>Estimate provided by water supplier in monthly measured billings.</p>	<p>Aggregate farm-gate deliveries per year $= 148,555 \text{ af/year}$</p>
Recoverable Flows	<p>This value is estimated using several sources of data and calculations:</p>	-
	<p>Using data from gauge on the drain (above).</p>	Drain data $= 1,800 \text{ AF per year}$
	<p>It is estimated that 2 inches per acre of leaching requirements are deep percolation.</p>	<p>Estimated deep percolation from leaching $= (2/12) \times (45,000) = 7,500 \text{ AF per year}$</p>
	<p>The remaining portion of the total delivered water that is not crop ET, agronomic water and environmental water is identified. $= AW - ETAW - EU - AU$</p>	<p>Estimated additional deep percolation (not from leaching) $= 160,920 - 99,000 - 9,900 - 6,000 = 46,020 \text{ af}$</p>
	<p>Based on the estimate of the acreage of non-cropped area, 20% is used by non-crop plants that are not part of intentional environmental objectives therefore, irrecoverable.</p>	<p>$20\% (46,020) = 9,204 \text{ af}$</p>
	<p>The portion remaining is considered returning as additional deep percolation to that from intentional leaching</p>	<p>$80\% (46,020) = 36,816 \text{ AF per year}$ Total estimated recoverable flows $= 1,800 + 7,500 + 36,816 = 46,116 \text{ AF/yr}$</p>
Supplier Scale Water Supply and Applied Water	<p>Quantity diverted by the supplier is derived from records for filing to the SWRCB. The supplier and privately pumped groundwater is estimated from power usage records.</p>	<p>Supplier diversions $= 156,420 \text{ AF/yr}$ Estimated GW pumped $= 19,500 \text{ AF/yr}$. Total WS $= 175,920 \text{ AF}$</p>
	<p>Total deliveries to non-irrigation agriculture and M&I are subtracted from the total water supplies. Delivered water also excludes groundwater recharge and accounts for the net change in surface storage within the water supplier's boundaries. Initial soil moisture in soil profile is accounted for, 1000 af.</p>	<p>Supplier non-irrigation agricultural deliveries $= 10,000 \text{ AF/yr}$ Supplier M&I deliveries $= 4,000 \text{ AF/yr}$ Soil moisture 1,000 AF. Applied water per year $= 175,920 - 10,000 - 4,000 - 1,000 = 160,920 \text{ AF per year}$</p>
Results		

A Methodology for Quantifying the Efficiency of Agricultural Water Use

$CCUF = ETAW / [AW]$	$= \{99,000 / (160,920)\} \times 100 = 61\%$	61% of applied water is used for crop consumption. 39% of the applied water is used for environmental use, agronomic use and recoverable and irrecoverable flows
$AWUF = [ETAW + AU] / AW$	$= \{99,000 + 9,900\} / (160,920) \times 100 = 68\%$	68% is used for crop needs.
$TWUF = [ETAW + AU + EU] / AW$	$= \{99,000 + 9,900 + 6,000\} / 160,920 \times 100 = 71\%$	71% Percentage of applied water is used for crop needs and environmental use, the remaining 29% is recoverable and irrecoverable flows.
$DF = FGD / WS$	$= \{148,555\} / 160,920 \times 100 = 92\%$	92% of the water supply in the distribution system is delivered to the water supplier customers and 8% is not delivered to customers and lost to recoverable (to other suppliers) or to salt sink irrecoverable flows.
$WMF = [ETAW + RF] / AW$	$= \{99,000 + 46,116\} / 160,920 \times 100 = 90\%$	Comparison of WMF (90%) with CCUF (61%) indicates that 29% of flow is recoverable within the boundary.

C.1.2 Water Supplier Scale Calculation Example 2

The following example is similar to supplier example 1 but with irrecoverable flow. Using this example, each method is calculated at the water supplier scale in Table C-2.

Table C-2 Water supplier scale water use efficiency quantification methods and Indicators, example 2

Quantifying the Efficiency of Agricultural Water Use and Irrigation System Performance Indicators		
Elements	Explanations	Calculations
ETAW	Same as Example 1	Example Option 1 = 99,000 AF per year
Agronomic	Same as Example 1	Approx = 9,900 AF per year
Environmental	Same as Example 1	Canal habitat = 200 AF per year Field habitat = 4,000 AF per year Drain flows = 1,800 AF per year Total EN= 6,000 af per year
Aggregate farm-gate delivery	Same as Example 1	Aggregate Field Scale AW per year = 148,555
Recoverable Flows	This value is estimated using data from gauge on the drain	Drain data = 1,800 AF per year
Irrecoverable flows	Supplier measures its drainage discharge to evaporation ponds	Drainage to ponds 44,116 af/year
Supplier Scale Water Supply and Applied Water	Same as Example 1	Supplier diversions = 156,420 AF per year Estimated GW pumped = 19,500 AF per year Supplier non-irrigation agricultural deliveries = 10,000 AF per year Supplier M&I deliveries = 4,000 AF per year soil moisture 1000 AF. Applied water per year = 160,920 AF per year
Results		
CCUF=ETAW/AW	= {(99,000/(160,920))} x 100	= 61%
AWUF=[ETAW+AU]/AW	= {(99,000+9,900)/(160,920)} x 100	= 68%
TWUF=[ETAW+AU+EU]/AW	= {(99,000+9,900+6,000)/160,920} x 100	=71%
DF=FGD/WS	= { (148,555)/160,920} x 100	= 92%
WMF=[ETAW+RF]/AW	= {(99,000+1800)/160,920} x 100	= 62%. This supplier has smaller WMF than supplier 1 because some of its water (44,316 af) is irrecoverable.

C.1.3 Field Scale

To provide insight into the use of the methods at the field scale, the following example was developed. Under this example, the field consists of 125 acres of processing tomatoes; planted from seed in raised beds and furrow irrigated. The field scale deliveries are augmented with groundwater pumping and the net change in surface storage and soil moisture are accounted for. Using this example for a single growing season, each method is calculated at the field scale in Table C-3.

Table C-3 Field scale example of water use efficiency quantification methods and Irrigation System performance Indicator

Quantifying the Efficiency of Agricultural Water Use and Irrigation System Performance Indicator		
Elements	Explanations	Calculations
ETAW	Similar to Example 1. See Table C-1 for details. ET _o = 2.92 ft K _c =0.82 P _e =0.23 ft ET=ET _o xK _c Area= 125 acres ETAW= (ET-P _e)xArea	ET=2.92x0.82=2.4 ETAW=(2.4-0.23)x 125= 275 AF
Agronomic Use	Similar to example 1 assumptions. LR= 0.1 Area= 125 Acres ETAW= 2.2 AU= ((LR)(ETAW)(Area))=	LR = (0.1)(2.2)(125)= 27.5 AF per season Seed bed preparation= 17 AF per season Total = 44.5 AF per season (of this amount, 10 AF of the seed bed water doubles as water for ETAW, which results in a net agronomic quantity of 34.5 AF). Net agronomic use =34.5 af/year
Environmental Use	Small wetland and garter snake habitat maintained on field edges; plants assumed to use water like a grass hay such as Sudan, 4 AF/Y; approximately 5 acres of habitat	Habitat = 20 AF per year
Distributional Uniformity	Average low quarter applied water depth of a field relative to the average depth of water applied to the entire field for one irrigation event.	Average low quarter depth = 2.8 inches per irrigation event Average applied water depth = 3.8 inches per irrigation event
Field Scale Applied Water	Estimate provided by water supplier in monthly measured deliveries delivery is applied to the field. Field level groundwater pumping (10 af) and net change in surface storage and/or soil moisture (3 af).	400 AF AW per season [surface diversion is 375 af per season, 10 AF per season of private groundwater pumping 3 AF soil moisture in the field from previous season. For a total of 413 AF of AW]
Equations:		
DU= Dawlq/Daw	= {2.8/3.8} x 100= 74%	DU is an Indicator of water use efficiency but is reported here because it is generally done by on-farm irrigation evaluation.
CCUF= ETAW/(AW)	= {275/(413)} x 100=66%	Percentage of applied water used by field crops. 34% of applied water is non

A Methodology for Quantifying the Efficiency of Agricultural Water Use

		beneficial evapotranspiration, recoverable or irrecoverable deep percolation and runoff.
$AWUF = (ETAW + AU) / AW$	$= \{(275 + 34.5) / (413)\} \times 100 = 74\%$	74% used and 26% are recoverable and irrecoverable.
$TWUF = (ETAW + AU + EU) / AW$	$= \{(275 + 34.5 + 20) / 413\} \times 100 = 79\%$	79% Percentage of applied water is used, 21% is recoverable or irrecoverable flows (non beneficial evapotranspiration, recoverable or irrecoverable deep percolation and runoff).

C.2 Calculation Examples of Productivity Indicators

The purpose of the indicators are:

- Evaluate crop production (in weight or gross crop revenue) per acre-foot of applied water within a defined scale.
- Evaluate how production (in weight or gross crop revenue) per acre-feet changed over time within a defined scale.

Table C-4 presents the gross crop revenue or gross value per acre-foot of applied water (VAW) for each of the significant crops or crop groups in Fresno County in California expressed in terms of 2010 dollars per acre-foot of applied water.

Table C-4 Example of the productivity indicator calculated for Fresno County scale

Summary Table Fresno County Crop Group or Crop	2010 Irrigated Harvested Acres	Gross Crop Revenue from Irrig. Acres (\$1,000's)	Total Applied Water 1,000s AF	Avg. Gross Crop Revenue per AF of Applied Water
Field Crops	371,885	361,861	989.3	366
Seed Crops	24,030	50,957	79.1	644
Truck Crops	258,220	1,528,285	448.0	3,411
Tree & Vine Crops	471,037	2,702,906	1,366.1	1,978
Nursery Products	715	37,478	1.6	23,826
All Crops	1,125,887	4,681,487	2,884.2	1,623
Selected Crops				
Corn Silage	40,700	38,332	105.8	362
Cotton, Pima	57,000	126,068	148.2	851
Hay, Alfalfa	68,100	75,210	279.2	269
Hay, Other	26,435	10,322	44.9	230
Wheat	61,408	41,149	55.3	745
Irrigated Pasture	40,000	5,000	172.0	29
Rice	2,650	2,041	13.8	148
Cantaloupes	19,100	75,429	26.7	2,821
Onions, Fresh	17,300	117,500	36.3	3,234
Tomatoes, Proc.	107,900	347,208	205.0	1,694
Almonds	137,930	581,230	455.2	1,277
Grapes, Raisin	137,644	487,000	330.3	1,474
Grape, Wine	40,209	200,945	96.5	2,082
Pistachios	26,740	222,480	88.2	2,521

All estimates exclude federal crop support payments.

The above summary table indicates that in 2010, the average gross crop revenue per acre-foot of applied water in Fresno County was \$1,623/AF.

County Crop Reports

Each California County with significant agriculture has an Agricultural Commissioner's Office, which produces annual Crop Reports. These reports are also known as "Crop and Livestock Reports" or other similar titles. They are usually published from May through October of the year following the year of record for that report. They contain data for that year and the previous year. For instance, the 2010 Fresno County Crop Report was published in the summer of 2011, and contains data on 2009 and 2010 agricultural production in Fresno County.

Farmgate prices represent the value of the farm output at the farm's gate, or just before it leaves the farm for the packing shed, ginner, huller, drier, processing plant, or buyer. FOB prices represent the farmgate value of the farm output, plus the costs to haul that output to the first off-farm receiving point, such as a packing shed or processing plant, plus varying degrees of other value-added steps, including sorting, grading, cooling, packing, hulling, ginning, and processing. Sometimes the FOB price of a crop is 2 to 3 times greater than its farmgate price.

The Crop Reports of most County Agricultural Commissioner's Offices give the values of most field crops in terms of their farmgate values. They give the values of truck crops (or "Vegetables and Melons") in terms of their farmgate or FOB values, or a combination of both values. The Crop Reports for most California counties give the values of most tree and vine crops (or "Fruits and Nuts") in terms of FOB values (although wine grape values are usually given at the farmgate level.)

County Crop Reports contain estimates for the two most recent years for all significant crops of harvested acres, average yield per acre, total production, average farmgate or FOB price per unit, and total gross crop revenue or total value of production. The broad crop groups are generally known as field crops, seed crops, vegetables and melons, fruit and nut crops, and nursery products. County Crop Reports also contain estimates of production and value for the various sectors of animal agriculture.

Applied Water Estimates

DWR's Land and Water Use Scientists in the Regional Offices produce estimates of applied water per acre per water year for 20 important crops or broad crop groups for each of the important agricultural counties in California for specific recent years. These unit applied water use estimates are developed for use in DWR's California Water Plan Update series, as well as for other DWR projects and publications.

The AF/acre AW estimates were for WY2005 for Fresno County, and were produced by DWR's Cal Ag Water Use Model. According to Regional Office staff, hydrologic and growing conditions in WY2005 were most similar to 2010 conditions Fresno County, when compared to such conditions in other recent water years.

Valuable data from recent DWR Land Use Surveys of Fresno County was also used, along with information and data from Land and Water Use Scientists in DWR's South Central Regional Office. Information from a January 2012 personal communications with staff of the Colusa County Agricultural Commissioner's Office was also used for these calculations.

This page left blank for two-sided printing

Appendix D. Parameter Descriptions and Calculations

Crop evapotranspiration (ET_c) - is a loss of water to the atmosphere by the combined processes of evaporation from crop and soil surfaces and transpiration from crops. It is the amount of water that a well-fertilized, disease-free, crop grown in a large field under optimum soil moisture condition needs to produce a full yield. In quantifying the efficiency of agricultural water use at all spatial scales, the implementing entity can either measure ET_c or estimate it using theoretical and/or empirical equations. Measurement methods use complex equipment such as Eddy Covariance, Bowen Ratio, and lysimeters, which are very intricate and therefore costly.

The most commonly used approach for estimating ET_c is to use reference evapotranspiration (ET_o) and crop coefficients (K_c).

$$ET_c = K_c * ET_o$$

ET_o is evapotranspiration from standardized grass surfaces and is calculated using theoretical and empirical equations that utilize weather parameters measured on such surfaces. To convert ET_o into ET_c, one needs to use a crop factor commonly known as a crop coefficient. K_c is developed for various crops through research. An important source of ET_o and K_c data for California is the California Irrigation Management Information System (CIMIS). CIMIS is a network of over 140 automated weather stations scattered throughout California that provide ET_o and weather data to the public free of charge (<http://www.cimis.water.ca.gov/cimis/welcome.jsp>). CIMIS also provides spatially distributed values of ET_o at 2-km grids by coupling remotely sensed satellite data with point measurements.

Under soil water stress conditions, a water stress coefficient (K_s) is incorporated into K_c to account for water stress on crop transpiration. The term actual crop evapotranspiration (ET_a) or adjusted crop evapotranspiration (ET_c adj) is often used under such condition. Water stress coefficient for limiting conditions is less than 1 (K_s<1), and under no soil water stress it is equal to 1 (K_s = 1).

$$ET_a = ET_c \text{ adj} = K_s * K_c * ET_o$$

However, under no water stress conditions (K_s = 1), and ET_c is equal to ET_a. Water stress coefficient (K_s) is usually empirically derived. Oftentimes field capacity, yield reducing threshold water content, and permanent wilting point are used to compute K_s.

In addition to the method above, for small regions or large regions, actual evapotranspiration can be estimation using satellite remote sensing.

Remote Sensing of ET. Recent developments in remote sensing have enabled researchers to estimate both ETo and ETa and derive spatially distributed values at various resolutions. In other words, remotely sensed data is used to generate ETo and/or ETa maps. Some of the remote sensing methods use the energy balance approach and calculate ET as a residual. Others use a vegetation index approach that is calibrated to the crop coefficient (Gonzalez-Dugo et al, 2009). Others couple remotely sensed parameters with numerical models or point measurements to generate ET information. It is recommended that any remote sensing method selected for implementation of agricultural water use efficiency be verified for accuracy in an environment where it is to be utilized.

For detailed analyses of actual crop evapotranspiration, one can also use the dual crop coefficient approach (FAO-56). This approach differentiates between plant transpiration and soil surface evaporation using basal crop coefficients (K_{cb}) and soil water evaporation (K_e). K_c is, therefore, an arithmetic sum of K_{cb} and K_e (i.e., $K_c = K_{cb} + K_e$). K_{cb} is the ratio of ETo to ET_c when the soil surface is dry but the root zone can still provide plenty of water for crop growth. K_e is zero when the soil surface is dry and evaporation only takes place by capillary rise, and increases as the moisture content of the soil surface increases.

Due to the complexity of using K_s , K_{cb} , and K_e terms, DWR recommends the use of simple K_c values from published works to estimate ET_c . Users who have the resources required to use the more complex approach can, however, use the dual crop coefficient approach. In either case, it is important for users to verify that the K_c values they are using are derived from the same ETo equation. In other words, K_c values derived using the Penman-Monteith (PM) ETo should only be used with PM ETo values to estimate ET_c . Since most of the ETo values for California come from the California Irrigation Management Information System (CIMIS), DWR recommends the use of K_c values from the CIMIS web site (<http://www.cimis.water.ca.gov>). Additional resources for K_c values include the UC Cooperative Extension Leaflets (for example, leaflets #21427 and #21428) and updated K_c values from local farm advisors and extension workers.

D.1 Models for Calculation Applied Water, ETAW, and Effective Precipitation

“Consumptive Use Program +” (“CUP+”) is a user-friendly Microsoft Excel application that estimates daily soil water balance to estimate ET_c and ETAW for agricultural crops and other surfaces that account for ET losses, such as water contributions from seepage of groundwater, rainfall, and irrigation within a study area over the period of record. The application computes Eto from daily solar radiation, maximum and minimum temperature, dew point temperature, and wind speed using the daily Penman-Monteith equation. In addition, the program uses a curve fitting technique to derive one year of daily weather data from the monthly data and estimate daily Eto . CUP+ accounts for the influence of orchard cover crops on K_c values and for immaturity effects on K_c values for tree and vine crops. The water balance model is similar to that used in the SIMETAW

application program. The application outputs a wide range of tables and charts that are useful for irrigation planning.

D.2 Estimates of Effective Rainfall (Precipitation) and ETAW Using CUP+

Soil water-holding characteristics, effective rooting depths, and irrigation frequency are used with rainfall and crop evapotranspiration (ET_c) data to calculate a daily soil water balance and determine effective rainfall and ET_{aw}, which is equal to the seasonal cumulative ET_c minus the effective rainfall. Irrigations are timed so that the estimated soil water depletion (SWD) does not exceed the yield threshold depletion (YTD), which is calculated as the product of the allowable depletion and the plant available water content within the crop rooting depth. The smaller soil root depth and the water holding characteristics are used to determine the plant available water (PAW). The allowable depletion is a crop and soil specific factor defining the fraction (or percentage) of the available water content within a rooting zone that can be depleted between irrigation events. For many crop and soil combinations, an allowable depletion of 50% is adequate.

Weighted crop coefficient curves are used with the daily ET_o estimates to calculate daily ET_c. The ET_c is subtracted from the soil water content (SWC) on each day until the soil water depletion (SWD) exceeds the YTD. Then an irrigation is applied and the soil water depletion goes back to zero (i.e. back to field capacity). Similarly, rainfall will decrease the soil water depletion to zero but never into the negative. When rainfall depths are greater than the SWD, the rainfall is only effective up to a depth equal to SWD. Effective rainfall (P_e) is calculated from the estimated precipitation (P_{cp}) and the soil water depletion. If the precipitation (P_{cp}) is less than the SWD, then P_e = P_{cp}. Otherwise, P_e = SWD, and the daily change in soil water content is SWD = ET_c – P_e = 0. There is no correction for runoff or run on to the field. It is assumed that if rainfall is sufficient to have appreciable runoff, then the soil will be filled to field capacity.

By definition, ETAW is the amount of applied irrigation water that contributes to ET_c; therefore, ETAW is the sum of the net irrigation applications (NA) during a cropping season. The ETAW for no irrigation events is therefore calculated as $ETAW = NA_1 + NA_2 + \dots + NA_n$.

Alternatively, ETAW can be calculated as the seasonal total evapotranspiration minus the cumulative effective rainfall contribution minus the difference in soil water content from the beginning to the end of the season.

<http://www.water.ca.gov/landwateruse/models.cfm>

Another source of estimating effective precipitation is a DWR publication titled “Effective Precipitation: A Study to Assess Consumptive Use of Winter Rains by Spring and Summer Crops, February 1989, DWR Central District”. Its findings are summarized in the box below.

Total monthly rainfall and corresponding change in soil moisture content were measured during winter at about 10 sites in the Central Valley. The 4-year study, which began in 1983, showed:

- The relationship between total rainfall and change in soil moisture is remarkably similar for each of the four winter months: November, December, January, and February. The relationship is:

$$\text{Soil moisture change} = -0.54 + 0.940 (\text{rainfall amount})$$

- Soil moisture content increases linearly with increased monthly rainfall for each of the four months. Surface evaporation is relatively constant, at 0.6 to 0.8 inch per month.
- In October, when the soil is initially dry, both the amount of stored soil moisture and the amount of evaporation from the soil surface increase with increasing amounts of total monthly rain. Change in stored soil moisture is linearly related to October rainfall as:

$$\text{Soil moisture change} = -0.06 + 0.635 (\text{rainfall amount})$$

- In March, when initial soil moisture content is generally high and evaporative demand is also high, surface evaporation rates are twice those for the four winter months, and the amount of rain going to soil moisture storage during March is correspondingly low. This is shown in the relationship:

$$\text{Soil moisture change} = -1.07 + 0.837 (\text{rainfall amount}).$$

The relationships shown above provide a rational basis for partitioning winter rain falling on fallow land (and excluding runoff) into:

- Stored soil moisture (effective precipitation),
- Evaporation from the soil surface, and
- Percolation to below the crop rooting depth.

AG Model: The Agricultural Water Use Model was developed by the DWR’s Northern Region to use monthly pan evaporation and pan coefficient data to estimate monthly Etc and ETAW for 20 crop categories by DAU/County for the Water Plan Update. Currently, the Northern and South Central Region Offices are using the Ag Model to develop their annual agricultural water use data for 20 crop categories for the CWPU 2013.

Table D-1 Crop Tolerance and Yield Potential of Selected Crops as Influenced by Irrigation Water Salinity (EC_w) or Soil Salinity (EC_e)¹Yield Potential²

	100%		90%		75%		50%		0%	
	EC_e	EC_w	EC_e	EC_w	EC_e	EC_w	EC_e	EC_w	"maximum" ³	
Field Crops										
Barley (<i>Hordeum vulgare</i>) ⁴	8.0	5.3	10	6.7	13	8.7	18	12	28	19
Cotton (<i>Gossypium hirsutum</i>)	7.7	5.1	9.6	6.4	13	8.4	17	12	27	18
Sugarbeet (<i>Beta vulgaris</i>) ⁵	7.0	4.7	8.7	5.8	11	7.5	15	10	24	16
Sorghum (<i>Sorghum bicolor</i>)	6.8	4.5	7.4	5.0	8.4	5.6	9.9	6.7	13	8.7
Wheat (<i>Triticum aestivum</i>) ^{4,6}	6.0	4.0	7.4	4.9	9.5	6.3	13	8.7	20	13
Wheat, durum (<i>Triticum turgidum</i>)	5.7	3.8	7.6	5.0	10	6.9	15	10	24	16
Soybean (<i>Glycine max</i>)	5.0	3.3	5.5	3.7	6.3	4.2	7.5	5.0	10	6.7
Cowpea (<i>Vigna unguiculata</i>)	4.9	3.3	5.7	3.8	7.0	4.7	9.1	6.0	13	8.8
Groundnut (Peanut) (<i>Arachis hypogaea</i>)	3.2	2.1	3.5	2.4	4.1	2.7	4.9	3.3	6.6	4.4
Rice (paddy) (<i>Oriza sativa</i>)	3.0	2.0	3.8	2.6	5.1	3.4	7.2	4.8	11	7.6
Sugarcane (<i>Saccharum officinarum</i>)	1.7	1.1	3.4	2.3	5.9	4.0	10	6.8	19	12
Corn (maize) (<i>Zea mays</i>)	1.7	1.1	2.5	1.7	3.8	2.5	5.9	3.9	10	6.7
Flax (<i>Linum usitatissimum</i>)	1.7	1.1	2.5	1.7	3.8	2.5	5.9	3.9	10	6.7
Broadbean (<i>Vicia faba</i>)	1.5	1.1	2.6	1.8	4.2	2.0	6.8	4.5	12	8.0
Bean (<i>Phaseolus vulgaris</i>)	1.0	0.7	1.5	1.0	2.3	1.5	3.6	2.4	6.3	4.2
Vegetable crops										
Squash, zucchini (courgette) (<i>Cucurbita pepo melopepo</i>)	4.7	3.1	5.8	3.8	7.4	4.9	10	6.7	15	10
Beet, red (<i>Beta vulgaris</i>) ⁵	4.0	2.7	5.1	3.4	6.8	4.5	9.6	6.4	15	10
Squash, scallop (<i>Cucurbita pepo melopepo</i>)	3.2	2.1	3.8	2.6	4.8	3.2	6.3	4.2	9.4	6.3
Broccoli (<i>Brassica oleracea botrytis</i>)	2.8	1.9	3.9	2.6	5.5	3.7	8.2	5.5	14	9.1
Tomato (<i>Lycopersicon esculentum</i>)	2.5	1.7	3.5	2.3	5.0	3.4	7.6	5.0	13	8.4
Cucumber (<i>Cucumis sativus</i>)	2.5	1.7	3.3	2.2	4.4	2.9	6.3	4.2	10	6.8
Spinach (<i>Spinacia oleracea</i>)	2.0	1.3	3.3	2.2	5.3	3.5	8.6	5.7	15	10
Celery (<i>Apium graveolens</i>)	1.8	1.2	3.4	2.3	5.8	3.9	9.9	6.6	18	12
Cabbage (<i>Brassica oleracea capitata</i>)	1.8	1.2	2.8	1.9	4.4	2.9	7.0	4.6	12	8.1
Potato (<i>Solanum tuberosum</i>)	1.7	1.1	2.5	1.7	3.8	2.5	5.9	3.9	10	6.7
Corn, sweet (maize) (<i>Zea mays</i>)	1.7	1.1	2.5	1.7	3.8	2.5	5.9	3.9	10	6.7
Sweet potato (<i>Ipomoea batatas</i>)	1.5	1.0	2.4	1.6	3.8	2.5	6.0	4.0	11	7.1
Pepper (<i>Capsicum annum</i>)	1.5	1.0	2.2	1.5	3.3	2.2	5.1	3.4	8.6	5.8

A Methodology for Quantifying the Efficiency of Agricultural Water Use

	100%		90%		75%		50%		0%	
									"maximum" ³	
	EC _e	EC _w	EC _e	EC _w	EC _e	EC _w	EC _e	EC _w	EC _e	EC _w
Lettuce (<i>Lactuca sativa</i>)	1.3	0.9	2.1	1.4	3.2	2.1	5.1	3.4	9.0	6.0
Radish (<i>Raphanus sativus</i>)	1.2	0.8	2.0	1.3	3.1	2.1	5.0	3.4	8.9	5.9
Onion (<i>Allium cepa</i>)	1.2	0.8	1.8	1.2	2.8	1.8	4.3	2.9	7.4	5.0
Carrot (<i>Daucus carota</i>)	1.0	0.7	1.7	1.1	2.8	1.9	4.6	3.0	8.1	5.4
Bean (<i>Phaseolus vulgaris</i>)	1.0	0.7	1.5	1.0	2.3	1.5	3.6	2.4	6.3	4.2
Turnip (<i>Brassica rapa</i>)	0.9	0.6	2.0	1.3	3.7	2.5	6.5	4.3	12	8.0
Wheatgrass, tall (<i>Agropyron elongatum</i>)	7.5	5.0	9.9	6.6	13	9.0	19	13	31	21
Wheatgrass, fairway crested (<i>Agropyron cristatum</i>)	7.5	5.0	9.0	6.0	11	7.4	15	9.8	22	15
Bermuda grass (<i>Cynodon dactylon</i>) ⁷	6.9	4.6	8.5	5.6	11	7.2	15	9.8	23	15
Barley (forage) (<i>Hordeum vulgare</i>) ⁴	6.0	4.0	7.4	4.9	9.5	6.4	13	8.7	20	13
Ryegrass, perennial (<i>Lolium perenne</i>)	5.6	3.7	6.9	4.6	8.9	5.9	12	8.1	19	13
Trefoil, narrowleaf birdsfoot ⁸ (<i>Lotus corniculatus tenuifolium</i>)	5.0	3.3	6.0	4.0	7.5	5.0	10	6.7	15	10
Harding grass (<i>Phalaris tuberosa</i>)	4.6	3.1	5.9	3.9	7.9	5.3	11	7.4	18	12
Fescue, tall (<i>Festuca elatior</i>)	3.9	2.6	5.5	3.6	7.8	5.2	12	7.8	20	13
Wheatgrass, standard crested (<i>Agropyron sibiricum</i>)	3.5	2.3	6.0	4.0	9.8	6.5	16	11	28	19
Vetch, common (<i>Vicia angustifolia</i>)	3.0	2.0	3.9	2.6	5.3	3.5	7.6	5.0	12	8.1
Sudan grass (<i>Sorghum sudanense</i>)	2.8	1.9	5.1	3.4	8.6	5.7	14	9.6	26	17
Wildrye, beardless (<i>Elymus triticoides</i>)	2.7	1.8	4.4	2.9	6.9	4.6	11	7.4	19	13
Cowpea (forage) (<i>Vigna unguiculata</i>)	2.5	1.7	3.4	2.3	4.8	3.2	7.1	4.8	12	7.8
Trefoil, big (<i>Lotus uliginosus</i>)	2.3	1.5	2.8	1.9	3.6	2.4	4.9	3.3	7.6	5.0
Sesbania (<i>Sesbania exaltata</i>)	2.3	1.5	3.7	2.5	5.9	3.9	9.4	6.3	17	11
Sphaerophysa (<i>Sphaerophysa salsula</i>)	2.2	1.5	3.6	2.4	5.8	3.8	9.3	6.2	16	11
Alfalfa (<i>Medicago sativa</i>)	2.0	1.3	3.4	2.2	5.4	3.6	8.8	5.9	16	10
Lovegrass (<i>Eragrostis sp.</i>) ⁹	2.0	1.3	3.2	2.1	5.0	3.3	8.0	5.3	14	9.3
Corn (forage) (maize) (<i>Zea mays</i>)	1.8	1.2	3.2	2.1	5.2	3.5	8.6	5.7	15	10
Clover, berseem (<i>Trifolium alexandrinum</i>)	1.5	1.0	3.2	2.2	5.9	3.9	10	6.8	19	13
Orchard grass (<i>Dactylis glomerata</i>)	1.5	1.0	3.1	2.1	5.5	3.7	9.6	6.4	18	12
Foxtail, meadow (<i>Alopecurus pratensis</i>)	1.5	1.0	2.5	1.7	4.1	2.7	6.7	4.5	12	7.9
Clover, red (<i>Trifolium pratense</i>)	1.5	1.0	2.3	1.6	3.6	2.4	5.7	3.8	9.8	6.6

A Methodology for Quantifying the Efficiency of Agricultural Water Use

	100%		90%		75%		50%		0%	
									"maximum" ³	
	EC _e	EC _w	EC _e	EC _w	EC _e	EC _w	EC _e	EC _w	EC _e	EC _w
Clover, alsike (<i>Trifolium hybridum</i>)	1.5	1.0	2.3	1.6	3.6	2.4	5.7	3.8	9.8	6.6
Clover, ladino (<i>Trifolium repens</i>)	1.5	1.0	2.3	1.6	3.6	2.4	5.7	3.8	9.8	6.6
Clover, strawberry (<i>Trifolium fragiferum</i>)	1.5	1.0	2.3	1.6	3.6	2.4	5.7	3.8	9.8	6.6
Fruit crops ¹⁰										
Date palm (<i>Phoenix dactylifera</i>)	4.0	2.7	6.8	4.5	11	7.3	18	12	32	21
Grapefruit (<i>Citrus paradisi</i>) ¹¹	1.8	1.2	2.4	1.6	3.4	2.2	4.9	3.3	8.0	5.4
Orange (<i>Citrus sinensis</i>)	1.7	1.1	2.3	1.6	3.3	2.2	4.8	3.2	8.0	5.3
Peach (<i>Prunus persica</i>)	1.7	1.1	2.2	1.5	2.9	1.9	4.1	2.7	6.5	4.3
Apricot (<i>Prunus armeniaca</i>) ¹¹	1.6	1.1	2.0	1.3	2.6	1.8	3.7	2.5	5.8	3.8
Grape (<i>Vitis sp.</i>) ¹¹	1.5	1.0	2.5	1.7	4.1	2.7	6.7	4.5	12	7.9
Almond (<i>Prunus dulcis</i>) ¹¹	1.5	1.0	2.0	1.4	2.8	1.9	4.1	2.8	6.8	4.5
Plum, prune (<i>Prunus domestica</i>) ¹¹	1.5	1.0	2.1	1.4	2.9	1.9	4.3	2.9	7.1	4.7
Blackberry (<i>Rubus sp.</i>)	1.5	1.0	2.0	1.3	2.6	1.8	3.8	2.5	6.0	4.0
Boysenberry (<i>Rubus ursinus</i>)	1.5	1.0	2.0	1.3	2.6	1.8	3.8	2.5	6.0	4.0
Strawberry (<i>Fragaria sp.</i>)	1.0	0.7	1.3	0.9	1.8	1.2	2.5	1.7	4	2.7

¹ Adapted from Maas and Hoffman (1977) and Maas (1984). These data should only serve as a guide to relative tolerances among crops. Absolute tolerances vary depending upon climate, soil conditions and cultural practices. In gypsiferous soils, plants will tolerate about 2 dS/m higher soil salinity (EC_e) than indicated but the water salinity (EC_w) will remain the same as shown in this table.

² EC_e means average root zone salinity as measured by electrical conductivity of the saturation extract of the soil, reported in deciSiemens per meter (dS/m) at 25°C. EC_w means electrical conductivity of the irrigation water in deciSiemens per meter (dS/m). The relationship between soil salinity and water salinity (EC_e = 1.5 EC_w) assumes a 15–20 percent leaching fraction and a 40–30–20–10 percent water use pattern for the upper to lower quarters of the root zone. These assumptions were used in developing the guidelines in Table 1.

³ The zero yield potential or maximum EC_e indicates the theoretical soil salinity (EC_e) at which crop growth ceases.

⁴ Barley and wheat are less tolerant during their germination and seeding stage; EC_e should not exceed 4–5 dS/m in the upper soil during this period.

⁵ Beets are more sensitive during germination; EC_e should not exceed 3 dS/m in the seeding area for garden beets and sugar beets.

⁶ Semi-dwarf, short cultivars may be less tolerant.

⁷ Tolerance given is an average of several varieties; Suwannee and Coastal Bermuda grass are about 20 percent more tolerant, while Common and Greenfield Bermuda grass are about 20 percent less tolerant.

⁸ Broadleaf Birdsfoot Trefoil seems less tolerant than Narrowleaf Birdsfoot Trefoil.

⁹ Tolerance given is an average for Boer, Wilman, Sand and Weeping Lovegrass; Lehman Lovegrass seems about 50 percent more tolerant.

¹⁰ These data are applicable when rootstocks are used that do not accumulate Na⁺ and Cl⁻ rapidly or when these ions do not predominate in the soil. If either ions do, refer to the toxicity discussion in Section 4.

¹¹ Tolerance evaluation is based on tree growth and not on yield.

This page left blank for two-sided printing

Appendix E. Metrics Considered but Not Included in Proposed Methodology

The following methods were considered but not included in the report:

- Root Zone Moisture Management. Ratio of the soil moisture to applied water.
- Effective Irrigation Efficiency. Ratio of crop ETAW to applied water minus agronomic and environmental use.
- Regional delivery fraction. Ratio of regional farm-gate delivery to total water diverted into the region.

The following indicators were considered but not included:

- Average Net Returns to Water is the value of output minus all non-water costs, divided by applied water. This is an average condition, so a higher average net return to water does not necessarily imply greater economic efficiency. Depending on the mix of data sources used, the calculations could produce negative net returns for some crops. Also, this calculation imputes to water the value of other inputs that are not explicitly priced, notably management.
- Marginal Value of Water for Agricultural Production. Statistical analysis and models can be used to estimate the Marginal Value of Water for Agricultural Production, using observed market information and behavior.

This page left blank for two-sided printing

Appendix F. Glossary

Agricultural Water Management Council – A non-profit organization established in 1996 dedicated to bringing together all interested parties in agricultural water management with the expressed goal to achieve greater water management efficiency. See: <http://www.agwatercouncil.org/>

Agricultural Water Management Plans (AWMPs) – Per SB X7-7, agricultural water suppliers that irrigate greater than or equal to 25,000 acres must complete a plan pursuant to CWC 10820 (see Appendix A).

Agronomic water use fraction (AWUF) – Method expands on the CCUF by including water for crop agronomic use at the basin, supplier or field scale.
 $AWUF = (ETAW + AU) / AW$.

Applied water (AW) – Consists of surface and groundwater applied to a boundary excluding non-crop uses and storage at the basin, supplier, or field scale.

California Water Code – Statutes adopted by the Legislature. See: <http://www.leginfo.ca.gov/cgi-bin/calawquery?codesection=wat>

California Water Plan (CWP) – collaborative planning framework for elected officials, agencies, tribes, water and resource managers, businesses, academia, stakeholders, and the public to develop findings and recommendations and make informed decisions for California's water future. The plan, updated every five years, presents the status and trends of California's water-dependent natural resources; water supplies; and agricultural, urban, and environmental water demands for a range of plausible future scenarios. See: <http://www.waterplan.water.ca.gov/>

Consumptive use – refers to water that is unavailable for reuse in the basin from which it was extracted, e.g., soil evaporation, plant transpiration, incorporation into plant biomass seepage to a saline sink, or by contamination.

Crop consumptive use fraction (CCUF) – Method that evaluates the relationship between the consumptive use of a crop and the quantity of water applied for that purpose at the basin, supplier, or field scale.
 $CCUF = ETAW / [AW]$

Crop evapotranspiration – water that enters the atmosphere by the combined processes of evaporation from crop and soil surfaces and transpiration from crops.

Delivery fraction (DF) – Indicator evaluates the relationship between the water delivered to an area and the total applied surface or groundwater at the supplier scale. $DF = FGD/WS$

Detailed analysis unit (DAU) – From 1974 to date, DAUs have been delineated statewide and used as part of statewide planning and focused to accommodate county statistics. See <http://www.waterplan.water.ca.gov/docs/maps/dau-web.pdf>

Distribution uniformity (DU) – Indicator evaluates the performance and effectiveness of an irrigation system at the field scale. $DU = \text{Dawlq/Daw}$

Effective precipitation (Pe) – fraction of precipitation water that is available for crops to use.

Environmental use (EU) – portion of applied water directed to environmental purposes within a defined scale that is not meeting ETAW of the irrigated commodity including such uses as water to produce and/or maintain wetlands, riparian or terrestrial habitats, where the quantity of water consumed or used for intended objectives is based on accepted professional practices.

Evapotranspiration (ET) – is a term used to describe the sum of evaporation and plant transpiration from the Earth's land surface to atmosphere. Evaporation accounts for the movement of water to the air from sources such as the soil and canopy interception. Transpiration accounts for the movement of water within a plant and the subsequent loss of water as vapor through stomata in its leaves.

Evapotranspiration of applied water (ETAW) – crop evapotranspiration minus the amount of water supplied to the crop by precipitation.

Farm-gate delivery (FGD) – the water delivery by the water supplier to its customer at the farm-gate.

Field scale – a term used to define the boundary of a parcel(s) of land served by an irrigation method or system.

Hydrologic – Pertaining to the circulation, distribution and use of water.

Leaching – the practice of applying required amount of water as a part of irrigation to avoid salts from building up in the soil.

Mobile labs – mobile irrigation laboratories consisting of team of technicians and equipments to evaluate the performance of irrigation systems. The laboratories measure water application rates and system distribution uniformity and give recommendations for irrigation system improvement, if necessary.

Non-consumptive use – refers to water that is available for reuse within the basin from which it was extracted, e.g., through return flows.

Productivity of Applied Water (PAW) – Indicator illustrates the relationship between crop production in tonnage and the volume of applied water at the statewide, county or field scale. $PAW = CY/AW$

Recoverable flows – consist of the amount of water leaving a given area as surface flows to non-saline bodies or percolation to usable groundwater and is available for supply or reuse.

Riparian – A riparian zone or riparian area is the interface between land and a river or stream.

Saline sink – a salt covered depression or a terminal point for discharge and disposition of water or other materials.

Tailwater – the spill water from the water supplier distribution system or water flowing out of the end of an irrigated field.

Tilewater - the drainage water collected by on-farm drainage systems.

Total water use fraction (TWUF) – Method expands on the CCUF by including water for crop agronomic use and to meet environmental objectives at the basin, supplier or field scale. $TWUF = (ETAW+AU+EU)/AW$

Transpiration – It is a part of the water cycle, and it is the loss of water vapor from parts of plants, especially in leaves but also in stems, flowers and roots.

U.S. Department of Agriculture National Agricultural Statistics Service (USDA NASS) – conducts hundreds of surveys every year and prepares reports covering U.S. agriculture. Production and supplies of food and fiber, prices paid and received by farmers, farm labor and wages, farm finances, chemical use, and changes in the demographics of U.S. producers are only a few examples.
<http://www.nass.usda.gov/>

Value of Applied Water (VAW) – Indicator illustrates the relationship between gross crop revenue in dollars and the volume of applied water at the statewide, county scale. $VAW = GCR/AW$

Water balance – a representation of all sources and dispositions of water into, within, and out of a defined boundary over a defined period of time.

Water management fraction (WMF) – Method evaluates the recoverable water available for reuse at another place or time in the system at the basin or supplier scale. $WMF = (ETAW+ RF)/AW$

Water supplier scale – a term used to define a boundary of agricultural irrigated land, either publicly or privately owned, that distributes or sells water for ultimate resale to customers.

Water use efficiency method – water use efficiency fractions that indicate a ratio of beneficial output from an agricultural system to an input to the agricultural system in volumes and/or depths of water and are considered for quantifying the efficiency of agricultural water use.